DENON

CD RECEIVER

RCD-M37

Owner's Manual

Manuel de l'Utilisateur

Manual del usuario

❑ SAFETY PRECAUTIONS

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

❑ Laser Class (IEC 60825-1:2001)

"CLASS 1
LASER PRODUCT"

❑ Copyrights / Droits d'auteur / Derechos de Autor

- It is prohibited by law to reproduce, broadcast, rent or play discs in public without the consent of the copyright holder.
- La reproduction, la diffusion, la location, le prêt ou la lecture publique de ces disques sont interdits sans le consentement du détenteur des droits d'auteur.
- De acuerdo con las leyes está prohibido reproducir, emitir, alquilar o interpretar discos en público sin la autorización del propietario de los derechos de autor.

IMPOTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
   Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.

ATTENTION:
- La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.
- Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.
- Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.

PRECAUCIÓN:
- La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc.
- No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas.
- A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.
- No exponer el aparato al goteo o salpicaduras cuando se utilice.
- No colocar sobre el aparato objetos llenos de líquido, como jarros.

CAUTION:
To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

PRECAUTION:
Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.
La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

PRECAUCIÓN:
Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.
El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

FCC Information (For US customers)

1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

❑ NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION / NOTAS SOBRE EL USO

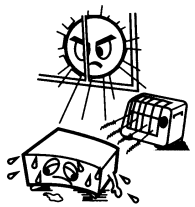

- Avoid high temperatures.
  Allow for sufficient heat dispersion when installed in a rack.
- Eviter des températures élevées.
  Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Evite altas temperaturas.
  Permite la suficiente dispersión del calor cuando está instalado en la consola.

- Handle the power cord carefully.
  Hold the plug when unplugging the cord.
- Manipuler le cordon d'alimentation avec précaution.
  Tenir la prise lors du débranchement du cordon.
- Maneje el cordón de energía con cuidado.
  Sostenga el enchufe cuando desconecte el cordón de energía.

- Keep the unit free from moisture, water, and dust.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Mantenga el equipo libre de humedad, agua y polvo.

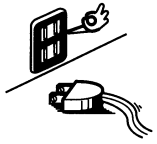

- Unplug the power cord when not using the unit for long periods of time.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.

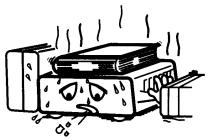

* (For apparatuses with ventilation holes)

- Do not obstruct the ventilation holes.
- Ne pas obstruer les trous d'aération.
- No obstruya los orificios de ventilación.

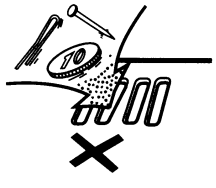

- Do not let foreign objects into the unit.
- Ne pas laisser des objets étrangers dans l'appareil.
- No deje objetos extraños dentro del equipo.

- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.

- Never disassemble or modify the unit in any way.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Nunca desarme o modifique el equipo de ninguna manera.

❑ Contents

Getting Started

Accessories 2
Cautions on Handling 2
Cautions on Installation 2
Main Features 2
Discs 2
Discs usable on the RCD-M37 2
Holding Discs 3
Loading Discs 3
Cautions on Loading Discs 3
Cautions on Handling 3
Cautions on Storing Discs 3
Cleaning Discs 3
About the Remote Control Unit 3
Inserting the Batteries 3
Operating Range of the Remote Control Unit 4
Part Names and Functions 4
Front Panel 4
Display 5
Rear Panel 5
Remote Control Unit 6

Connections

Preparations 8
Cables Used for Connections 8
Using the AM Loop Antenna 8
Assembling the AM Loop Antenna 8
Speaker Connections 9
Connecting the Speaker Cables 9
Connecting the Playback Components 10
Control Dock for iPod 10
Connecting the Recording Components 10
CD Recorder / MD Recorder / Tape deck 10
Connections to Other Devices 10
Antenna Terminals 10
USB Port 11
Connecting the Power Cord 11
Once Connections are Completed 11
Turning the Power On 11

Setup

Setting the Current Time (24-Hour Display) 12

Playback

Preparations 13
Turning the Power On 13
Loading Discs 13
Operations Possible During Playback 13
Adjusting the Master Volume 13
Input Source Switching 13
Adjusting the Tone 13
Turning the Sound Off Temporarily (Muting) 13
Switching the Display's Brightness 13
Listening with Headphones 13
CD Playback 14
Playing CDs 14
Playing Repeatedly <Repeat Playback> 14
Playing Random Order <Random Playback> 14
Playing Tracks in the Desired Order <Program playback> 15
Switching the Display 15
Playback of MP3 and WMA Files 15
About the MP3 and WMA Formats That Can be Played 15
Playing MP3 and WMA Files 16
TUNER Playback 17
Tuning in Broadcast Stations 17
Automatically Presetting FM Stations (Auto Preset) 17
Presetting FM/AM Stations Manually 17
Listening to Preset Stations 18
Naming the Currently Tuned in Broadcast Station 18
iPod® Playback 18
Preparations 18
Listening to Audio 19
Disconnecting the iPod 19
Playing a Portable Audio 19
Connecting a Portable Player 19
Playing the Portable Player 19
USB Playback 20
Playable USB Memory Formats 20
Basic Operation 20

Setting the Timer

Timer Playback 22
Setting the Timer 22
Sleep Timer Playback 23

Other Functions

Convenient Functions 24
Auto Power On 24
Auto Function Selector Function 24
Last Function Memory 24
Resetting the Microprocessor 24
Using an Optimizing Filter 24

Troubleshooting

..... 25

Specifications

..... 26

Getting Started

Thank you for purchasing this DENON product. To ensure proper operation, please read this owner's manual carefully before using the product.
After reading them, be sure to keep them for future reference.

Accessories

Check that the following parts are supplied with the product.

① Remote control (RC-1097)	1
② R03/AAA batteries	2
③ Power cord (Cord length: Approx. 6.6 ft / 2 m)	1
④ AM loop antenna	1
⑤ FM indoor antenna	1
⑥ Owner's manual	1
⑦ Warranty (for North America model only)	1
⑧ Service station list	1

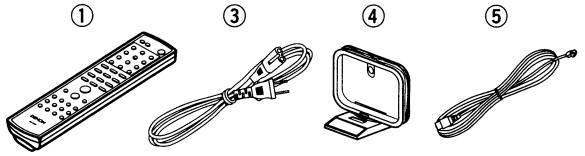

Cautions on Handling

- **Before turning the power switch on**
  Check once again that all connections are correct and that there are no problems with the connection cables.
- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.
- **Sufficiently ventilate the place of installation**
  If the unit is left in a room full of the smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup could get dirty, in which case it will not be able to read the signals properly.
- **About condensation**
  If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.
  If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.
- **Cautions on using mobile phones**
  Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.
- **Moving the unit**
  Turn off the power and unplug the power cord from the power outlet.
  Next, disconnect the connection cables to other system units before moving the unit.
- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:
For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

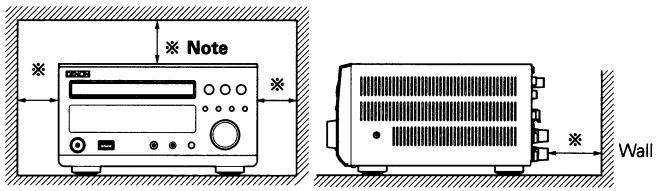

Main Features

1. **High quality amplifier stressing sound quality**
   Equippd with 30 W + 30 W (6 Ω/ohms) high quality amplifier circuits.
2. **Tone control and SDB control**
   Separate bass and treble tone controls for adjusting the tone to your tastes and Super Dynamic Bass (SDB) circuit for producing powerful bass sound even when the volume is low.
   Source direct position provided for turning off the SDB and tone control circuitry to make the response flat.
3. **CD player for digital sound**
   Compact body integrating a CD section in addition to the FM/AM tuner and amplifier, allowing playback of CD-R/RW discs.
4. **Playback of MP3 and WMA files**
   Supports playback of discs and USB memory devices on which MP3 and WMA files are recorded. The track name and artist name of the currently playing track can be displayed on the set's display.
   The characters that can be displayed "Switching the Display" (☞page 16)
5. **Low standby power consumption**
   Designed with considerations on the environment, with the power consumption when the power is in standby kept down to about 0.3 W.

Discs

❶ **Music CDs**
Discs marked with the logotype below can be played in this unit.

❷ **CD-R/CD-RW**

NOTE

- Discs with special shapes (heart-shaped discs, octagonal discs, etc.) cannot be played. Do not attempt to play them, as doing so can damage the product.
- Some discs and some recording formats may not be playable.
- Non-finalized discs cannot be played.



※ What is finalization?
Finalization is the process that makes recorded CD-R/CD-RW discs playable on compatible players.

Holding Discs

Do not touch the signal surface.

Loading Discs

- Set the disc with the labeled side facing up.
- Make sure the disc tray is fully open when inserting the disc.
- Place the discs flatly, 12 cm discs in the outer tray guide (Figure 1), 8 cm discs in the inner tray guide (Figure 2).

Figure 1

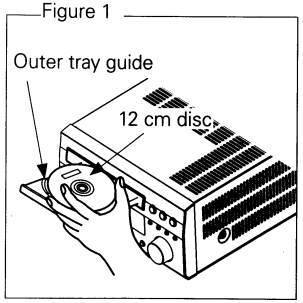

Figure 2

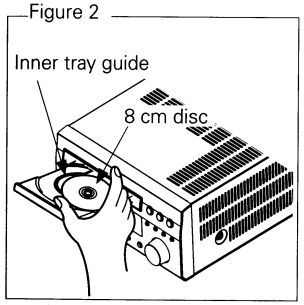

- Place 8 cm discs in the inner tray guide without using an adapter.

- "00 Tr 00 : 00" is displayed if a disc that cannot be played is loaded.
- "00 Tr 00 : 00" is displayed if the disc is loaded upside-down or if no disc is loaded.

NOTE

Do not push the disc tray in by hand when the power is turned off. Doing so could damage the set.

Cautions on Loading Discs

- Only load one disc at a time. Loading two or more discs can damage the unit or scratch the discs.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs can get caught inside the player and damage it.

Cautions on Handling

- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole at the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

Cautions on Storing Discs

- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
  1. Places exposed to direct sunlight for long periods of time
  2. Dusty or humid places
  3. Places exposed to heat from heating appliances, etc.

Cleaning Discs

- If there are fingerprints or dirt on discs, wipe them off before using the disc. Fingerprints and dirt can impair sound quality and cause interruptions in playback.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

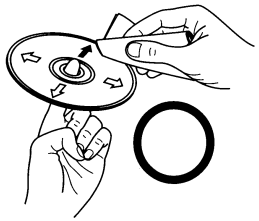

Gently wipe the disc from the inside towards the outside.

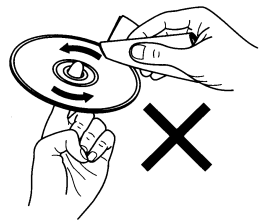

Do not wipe with a circular motion.

NOTE

Do not use record spray, antistatic agents, or benzene, thinner or other solvents.

About the Remote Control Unit

Inserting the Batteries

① Slide the rear lid in the direction of the arrow and remove it.

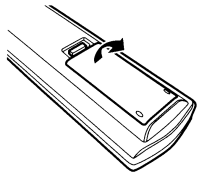

② Load the two batteries properly as indicated by the marks in the battery compartment.

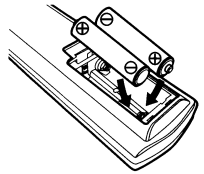

③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not attempt to charge dry batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

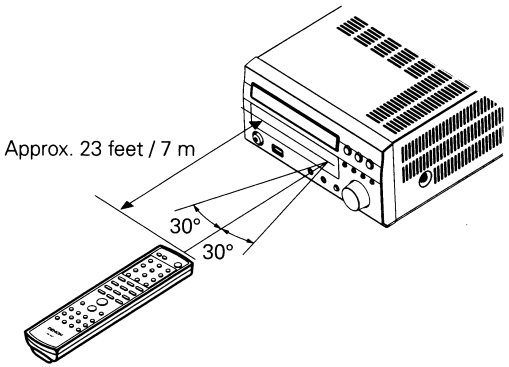

NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Part Names and Functions

For buttons not explained here, see the page indicated in parentheses ( ).

Front Panel

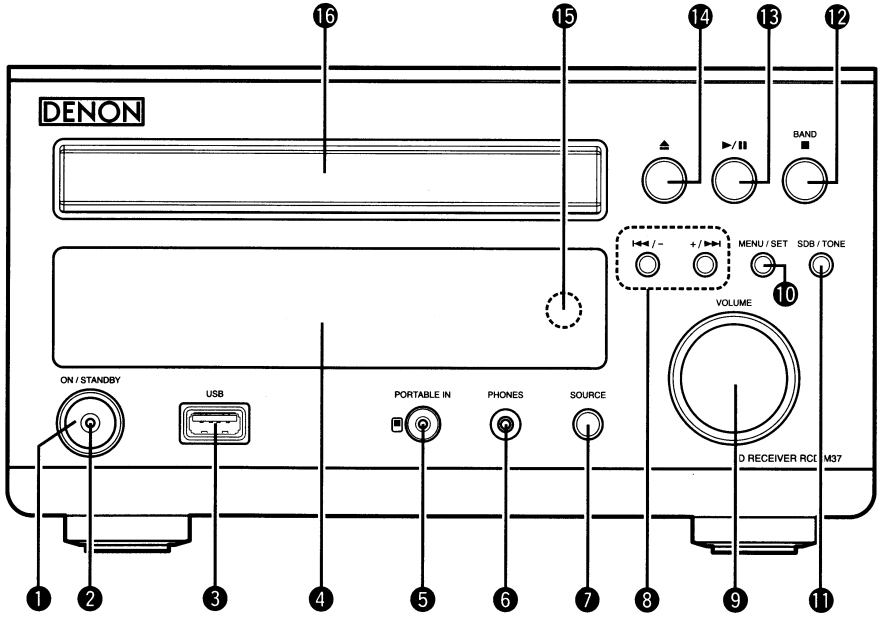

❶ **Power operation button (ON/STANDBY)** ..... (13)
❷ **Power indicator** ..... (13)
❸ **USB port (USB)** ..... (11)
❹ **Display**
❺ **Portable jack (PORTABLE IN)** ..... (19)
❻ **Headphones jack (PHONES)** ..... (13)
❼ **SOURCE button** ..... (13)
❽ **Revers-skip/Forward-skip buttons (I◄◄/–, +/►►I)** ..... (14, 17)
❾ **Master volume control knob (VOLUME)** ..... (13)
❿ **MENU/SET button** ..... (12, 22)
⓫ **SDB/TONE button** ..... (13)
⓬ **BAND/Stop button (BAND/■)** ..... (14, 17)
⓭ **Play/Pause button (►/II)** ..... (14)
⓮ **Disc tray open/close button (▲)** ..... (13)
⓯ **Remote control sensor** ..... (4)
⓰ **Disc tray** ..... (3)

Display

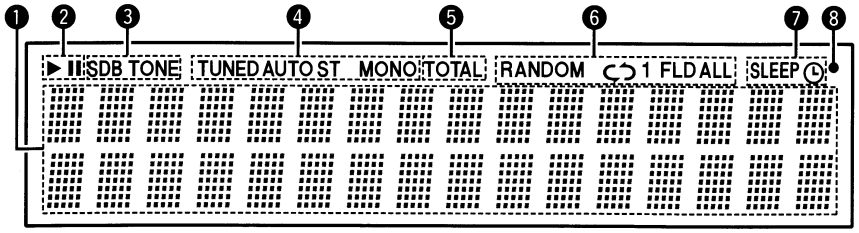

❶ **Information display**
Various information is displayed here, depending on the operation mode.

❷ ▶: (the play indicator) lights when a disc is playing.
II: (the pause indicator) lights when a disc is pausing.

❸ **SDB, TONE indicator** ..... (13)

❹ **Reception mode indicator** ..... (17)

❺ **TOTAL indicator**
Lights when the total number of tracks and total time of the CD are displayed.

❻ **Play mode indicator** ..... (14)

❼ **Timer indicator** ..... (23)

❽ ●: Flashes when remote control signals are received.

Rear Panel

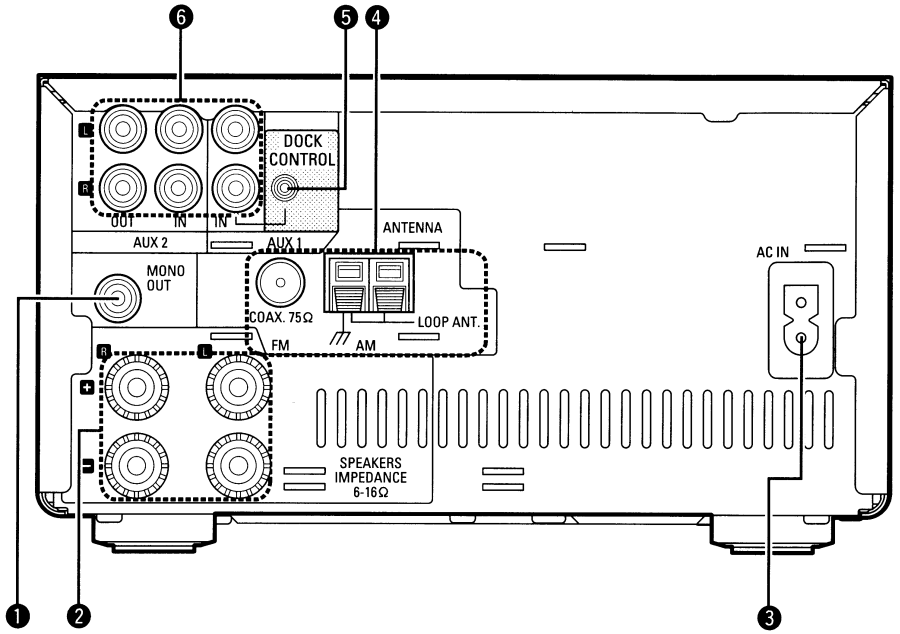

❶ **Monaural audio connector (MONO OUT)** ..... (9)

❷ **Speakers terminals** ..... (9)

❸ **AC inlet (AC IN)** ..... (11)

❹ **FM/AM antenna terminals** ..... (10)

❺ **DOCK CONTROL jack** ..... (10)

❻ **AUX1/AUX2 Analog audio connectors** ..... (10)

Remote Control Unit

Buttons Operable for All Functions (CD, TUNER, iPod and USB)

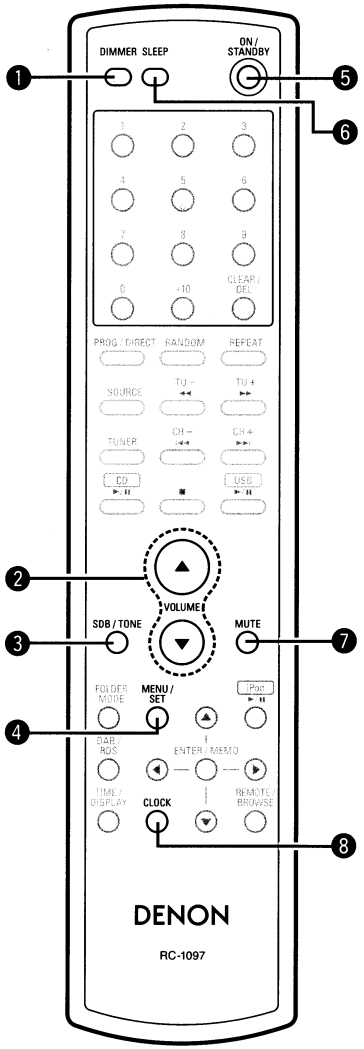

❶ **DIMMER button** ..... (13)
❷ **Master volume control buttons (VOLUME)** ..... (13)
❸ **SDB/TONE button** ..... (13)
❹ **MENU/SET button** ..... (12)
❺ **ON/STANDBY button** ..... (13)
❻ **SLEEP button** ..... (23)
❼ **MUTE button** ..... (13)
❽ **CLOCK button** ..... (12)

NOTE

The **DAB/RDS** button cannot be used.

Buttons Operable When the Function is Set to "CD"

The buttons listed at "Buttons Operable for All Functions" can also be used.

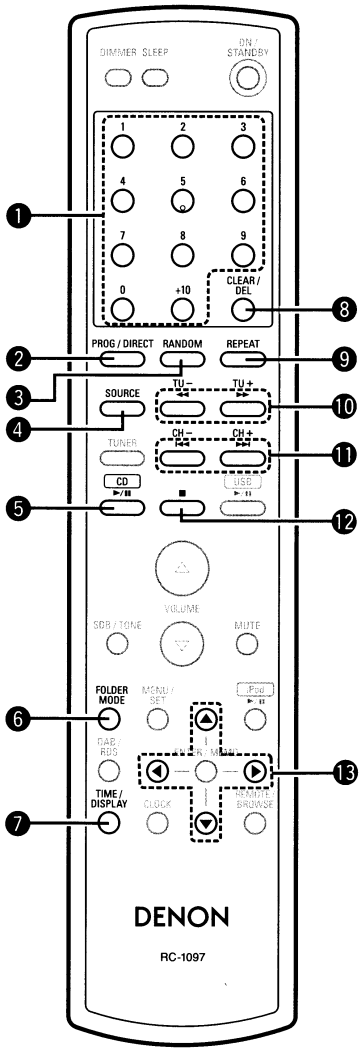

❶ **Number buttons** ..... (14)
❷ **PROG/DIRECT button** ..... (15)
❸ **RANDOM button** ..... (14)
❹ **SOURCE button** ..... (14)
❺ **CD ►/II button** ..... (14)
❻ **FOLDER MODE button** ..... (16)
❼ **TIME/DISPLAY button** ..... (15)
❽ **CLEAR/DEL button** ..... (15)
❾ **REPEAT button** ..... (14)
❿ **Fast-reversing/Fast-forwarding buttons (◄◄, ►►)** ..... (14)
⓫ **Reverse-skip/Forward-skip buttons (I◄◄, ►►I)** ..... (14)
⓬ **Stop button (■)** ..... (14)
⓭ **Cursor buttons (△▽◁ ▷)** ..... (16)

Buttons Operable When the Function is Set to "TUNER"

The buttons listed at "Buttons Operable for All Functions" can also be used.

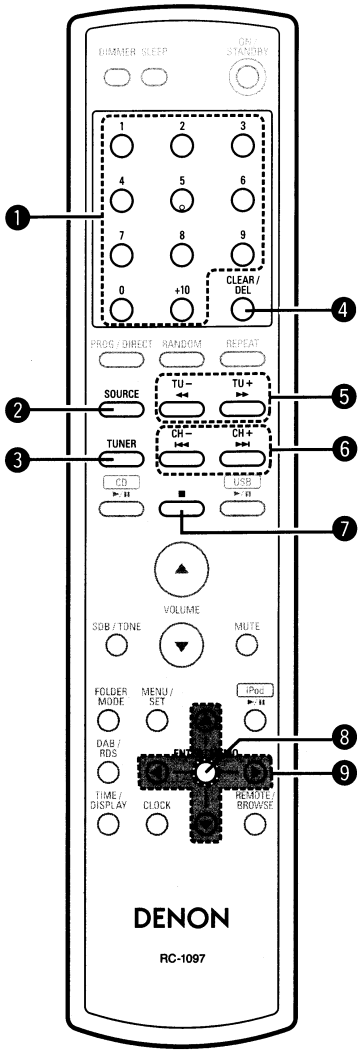

❶ **Number buttons** ..... (18)
❷ **SOURCE button** ..... (17)
❸ **TUNER button** ..... (17)
❹ **CLEAR/DEL button** ..... (18)
❺ **Tuning +, – buttons (TU+, TU–)** ..... (17)
❻ **Channel +, – buttons (CH+, CH–)** ..... (17)
❼ **Stop button (■)** ..... (17)
❽ **ENTER/MEMO button** ..... (17)
❾ **Cursor buttons (△▽◁ ▷)** ..... (17)

Buttons Operable When the Function is Set to "iPod", "USB"

The buttons listed at "Buttons Operable for All Functions" can also be used.

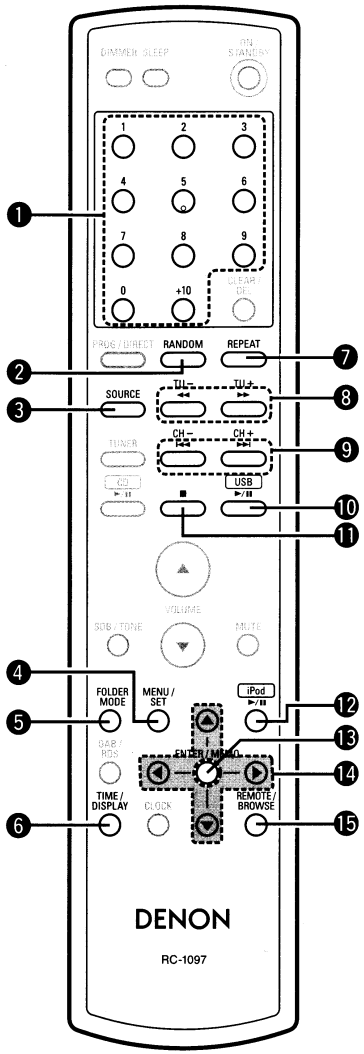

❶ **Number buttons** ..... (21)
❷ **RANDOM button** ..... (21)
❸ **SOURCE button** ..... (20)
❹ **MENU/SET button** ..... (19)
❺ **FOLDER MODE button** ..... (21)
❻ **TIME/DISPLAY button** ..... (19)
❼ **REPEAT button** ..... (21)
❽ **Fast-reversing/Fast-forwarding buttons (◀◀, ▶▶)** ..... (21)
❾ **Reverse-skip/Forward-skip buttons (I◀◀, ▶▶I)** ..... (21)
❿ **USB ▶/II button** ..... (20)
⓫ **Stop button (■)** ..... (21)
⓬ **iPod ▶/II button** ..... (19)
⓭ **ENTER/MEMO button** ..... (19)
⓮ **Cursor buttons (△▽◁ ▷)** ..... (19)
⓯ **REMOTE/BROWSE button** ..... (18)

Connections

Connections for all compatible audio signal formats are described in this owner's manual. Please select the types of connections suited for the equipment you are connecting.
With some types of connections, certain settings must be made on the RCD-M37. For details, refer to the instructions for the respective connection items below.

NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the owner's manual of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power supply cords together with connection cables. Doing so can result in humming or noise.

Preparations

Cables Used for Connections

Select the cables according to the equipment being connected.

Audio cables

Analog connections (stereo)

Stereo pin-plug cable

Analog connections (subwoofer)

Pin-plug cable

Speaker connections



Speaker cable

Signal direction

Audio signal:

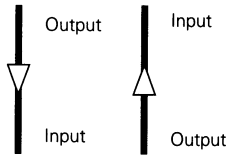

Using the AM Loop Antenna

❑ To use suspended on a wall

Suspend directly on the wall without assembling.



❑ To use standing alone

Use the procedure below to assemble.

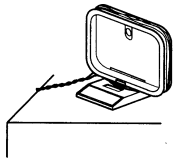

Assembling the AM Loop Antenna

1 **Bend in the direction of the arrow.**



2 **Insert into the hole.**

Speaker Connections

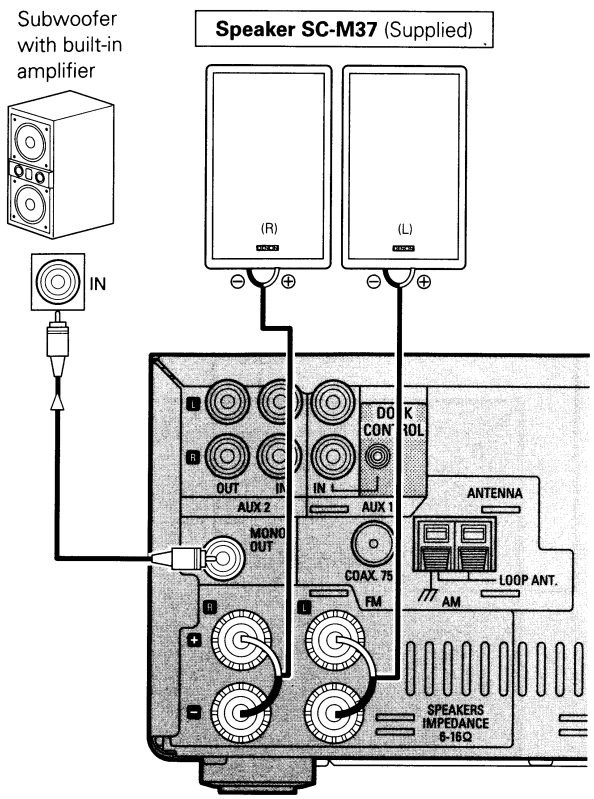

Connecting the Speaker Cables

Check the left (L) and right (R) channels and the + (red) and – (black) terminals on the set and the speakers to be used and interconnect the cables to the same polarities.

1 **Peel off about 10 mm of the sheathing at the tip of the cable, twist the core wire and terminate it.**

2 **Turn the speaker terminal counterclockwise to loosen it.**

3 **Insert the speaker cable's core wire into the base of the speaker terminal.**

4 **Turn the speaker terminal counterclockwise to tighten it.**

When using a banana plug

Tighten the speaker terminal firmly before inserting the banana plug.

NOTE

- Use speakers with an impedance of 6 to 16 Ω/ohms. The protection circuit may be activated if speakers with an impedance other than specified are used.
- Connect the speaker cables in a way that they do not stick out of the speaker terminals. The protection circuit may be activated if the core wires touch the rear panel or screws or if the + and – sides touch.
- Never touch the speaker terminals while the power is on. Doing so could cause electric shock.

Protector circuit

The protection circuit will be activated in the following cases:

- When the speaker cable's core wires are touching the rear panel or screws or when the speaker cable's + and – sides are touching
- When the surrounding temperature is extremely high
- When the internal temperature rises due to extended use with a high output

If this happens, unplug the power cord, then check the connections of the speaker cables and input cables. If the set's temperature is extremely high, wait for it to cool off and improve surrounding ventilation. After doing this, plug the power cord back in.

If the protection circuit is activated though there are no problems in ventilation around the set or in connections, the set could be damaged. Turn off the power, then contact a DENON servicing and inquiry outlet.

Connecting the Playback Components

Control Dock for iPod

Use a DENON Control Dock for iPod (ASD-1R or ASD-3N/3W, sold separately) to connect the set with an iPod.

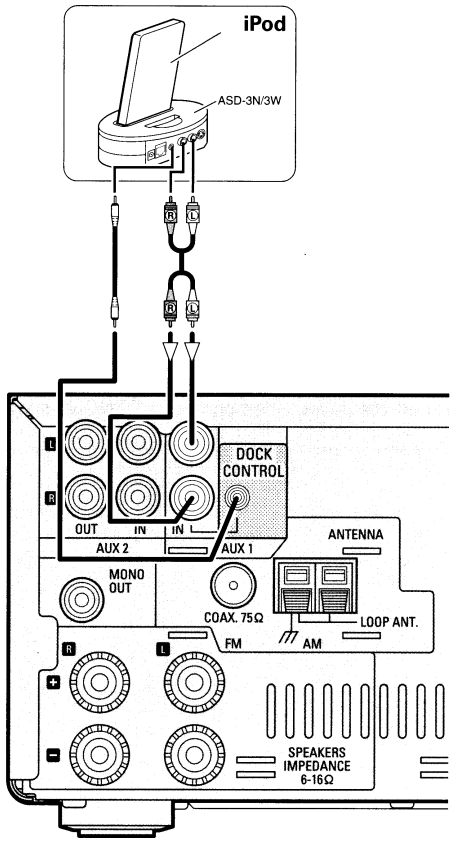

- When using a Control Dock for iPod, the Control Dock for iPod must be set. For details, refer to the operating instructions of the Control Dock for iPod.
- To use an iPod, see "iPod® Playback" (☞page 18).

Connecting the Recording Components

CD Recorder / MD Recorder / Tape deck

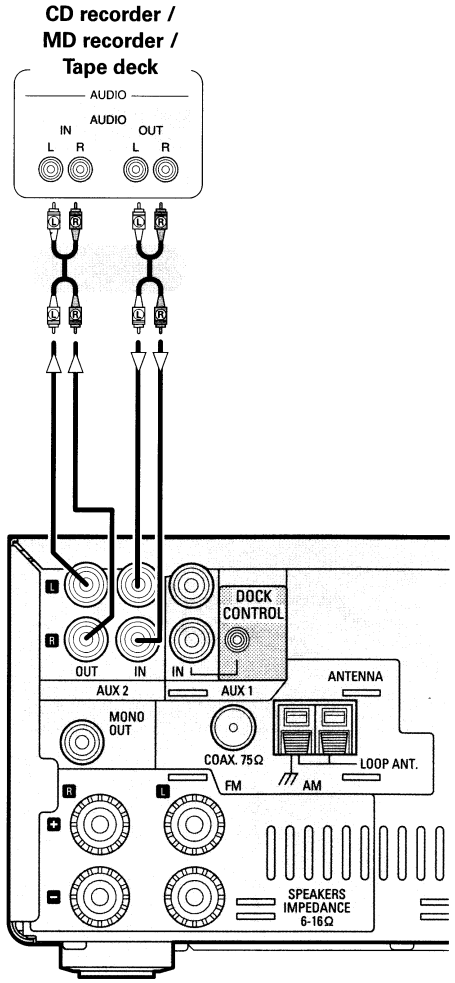

Connections to Other Devices

Antenna Terminals

AM/FM

The AM and FM reception sensitivity depends on the place the antenna is set and the direction in which it is set. Set it so that reception is best.

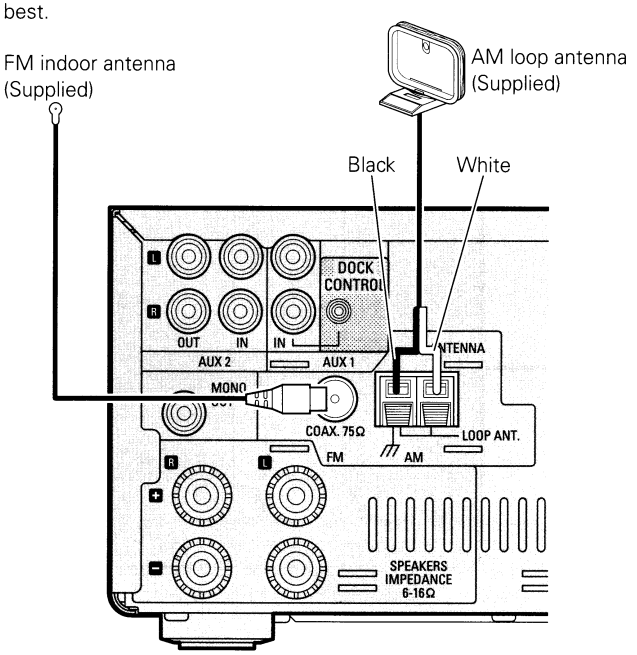

Note to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

❑ Connecting the AM loop antenna

1 **Push the lever.**

2 **Insert the conductor.**



3 **Return the lever.**

NOTE

- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.
- Do not connect two FM antennas simultaneously.

USB Port

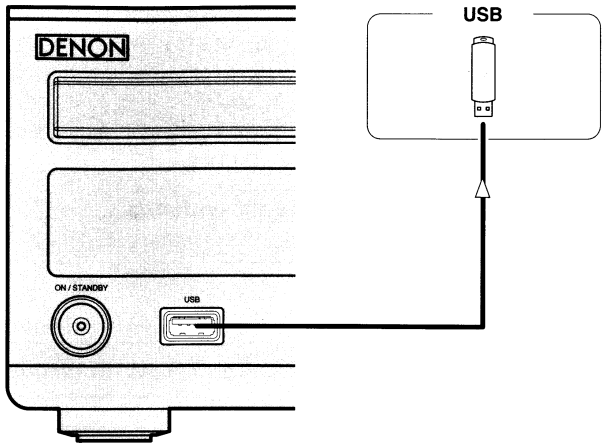

NOTE

- It is not possible to connect and use a computer via the RCD-M37's USB port using a USB cable.
- For details about USB memory devices, see "Playable USB Memory Formats" (☞page 20).

Connecting the Power Cord

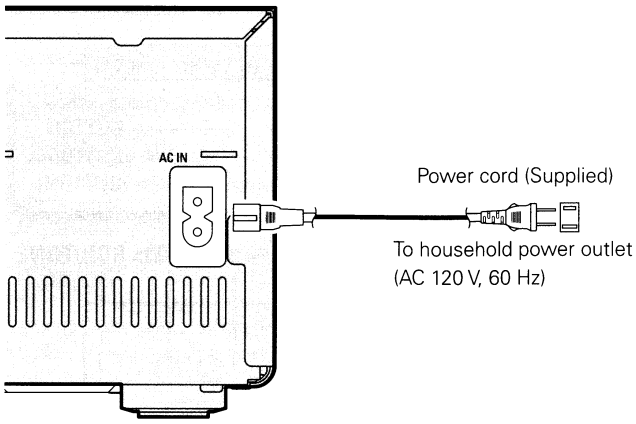

NOTE

- Only use the supplied power cord.
- Be sure the power cord is unplugged from the power outlet before connecting or disconnecting it to the AC IN.

Once Connections are Completed

Turning the Power On (☞page 13)

Setup

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

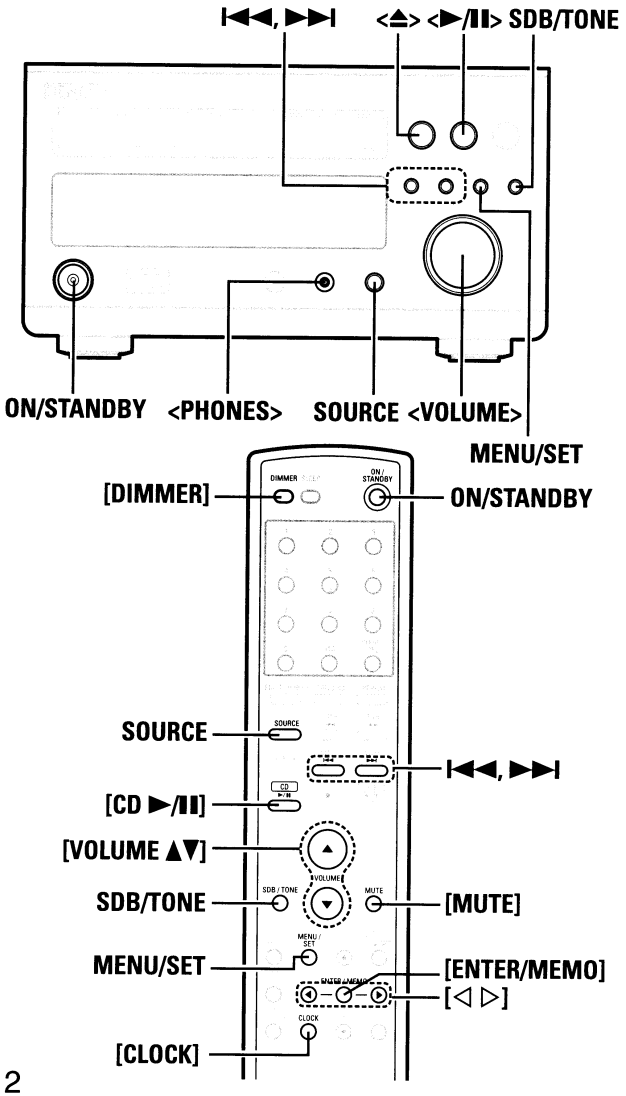

Setting the Current Time (12-Hour Display)

[Example] Setting the current time to 10:15 am

1 **Press ON/STANDBY to turn the power on.**

2 **Press [CLOCK].**
The current time is displayed.

3 **Press MENU/SET for over 1 second to set the manual time setting mode.**
The "hours" display flashes.



4 **Use I◄◄, ►►I or [◁ ▷] to set the "hours".**



5 **Press MENU/SET or [ENTER/MEMO].**
The "minutes" display flashes.



6 **Use I◄◄, ►►I or [◁ ▷] to set the "minutes".**



7 **Press MENU/SET or [ENTER/MEMO].**
The current time is set, and the normal display reappears.

❑ Checking the current time when the power is on

Press **[CLOCK]**.
When pressed again or if a different operation is performed, the normal display reappears.

❑ Checking the current time when the power is set to standby

Press **MENU/SET** or **[CLOCK]**.
Press again to turn off display.

- Displaying the time when the power is set to standby consumes electricity. To reduce electric consumption, turn the time display off.
- When the function is set to iPod, the current time cannot be set.

Playback

Preparations

Turning the Power On

Press ON/STANDBY.

- The power turns on. Press again to set the power to standby.
- Power indicator
  Standby.....Red
  Power on.....Green
  When the timer is set.....Orange

NOTE

- Power continues to be supplied to some of the circuitry even when the power is in the standby mode. When leaving home for long periods of time or when traveling, either press **ON/STANDBY** to turn off the power, or unplug the power cord from the power outlet.
- Be sure to stop playback before turning the power off.

❑ Completely turning off the power

Unplug the power cord from the wall outlet.

※ Note that the time setting is cleared when the power cord is unplugged from the outlet.

※ The settings made for the various functions may be cleared if the power cord is left unplugged from a power outlet for an extended period of time.

Loading Discs

In the stop mode, press <⏏> to open the disc tray.

※ "Loading discs" (☞page 3).

❑ To close the disc tray

Press <⏏> again.

※ The disc tray also closes when <▶/II>, [CD ▶/II] or **SOURCE** is pressed.

NOTE

Do not place any foreign objects in the disc tray. Doing so could damage it.

Operations Possible During Playback

Adjusting the Master Volume

Either turn <VOLUME> or press [VOLUME ▲▼].

The volume level is displayed.

[Variable range]

VOLUME 00 - 45, VOLUME MAX

Input Source Switching

Press SOURCE to select the input source.

CD → TUNER → AUX1 (AUX1/Dock) → AUX2 → PORTABLE IN → USB → CD

※ "AUX1/Dock" is displayed when a Control Dock for iPod is connected to "AUX1".

※ "PORTABLE IN" is only displayed when connected.

Adjusting the Tone

1 Select the item to be adjusted with SDB/TONE.

SDB → BASS → TREBLE → S.DIRECT → SDB

【About the display】

When the SDB is on ..... "SDB" is displayed.

When BASS or TREBLE is set to something other than 0 dB ..... "TONE" is displayed.

2 Display the mode you want to adjust, then use I◀◀, ▶▶I and [◁ ▷] to turn on or off and to adjust the tone.

※ If no operation is performed for 5 seconds, the adjustment is retained and the normal display reappears.

[Selectable modes]

SDB : Switches Super Dynamic Bass on and off.

BASS : Adjusts the bass sound.
[Variable range] -10dB ~ +10dB

TREBLE : Adjusts the treble sound.
[Variable range] -10dB ~ +10dB

S.DIRECT : Turns SDB, bass and treble off.

Settings made upon purchase :

- SDB ..... OFF
- BASS ..... 0 dB
- TREBLE ..... 0 dB
- S. DIRECT ..... OFF

Turning the Sound Off Temporarily (Muting)

Press [MUTE].

The "MUTE ON" is displayed.

To cancel, press **[MUTE]** again.
(The mute mode is also canceled when the **<VOLUME>** control is turned or a **[VOLUME ▲▼]** is pressed.)

Switching the Display's Brightness

Press [DIMMER].

100 % → 70 % → 40 % → OFF → 100 %

※ The display's brightness switches each time the button is pressed.

Listening with Headphones

Plug the headphones (sold separately) into the <PHONES>.

※ The sound from the speakers is automatically cut off.

NOTE

Be careful not to set the volume too high when using headphones.

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

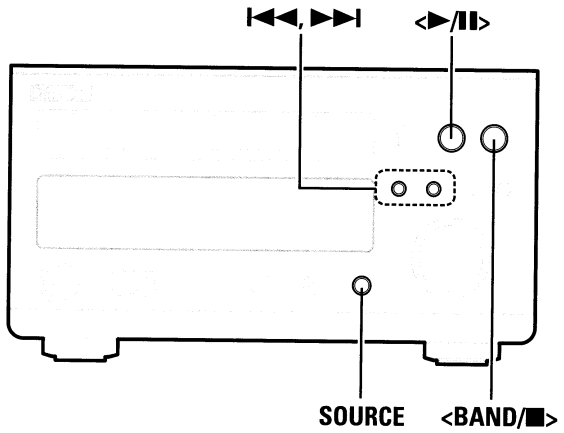

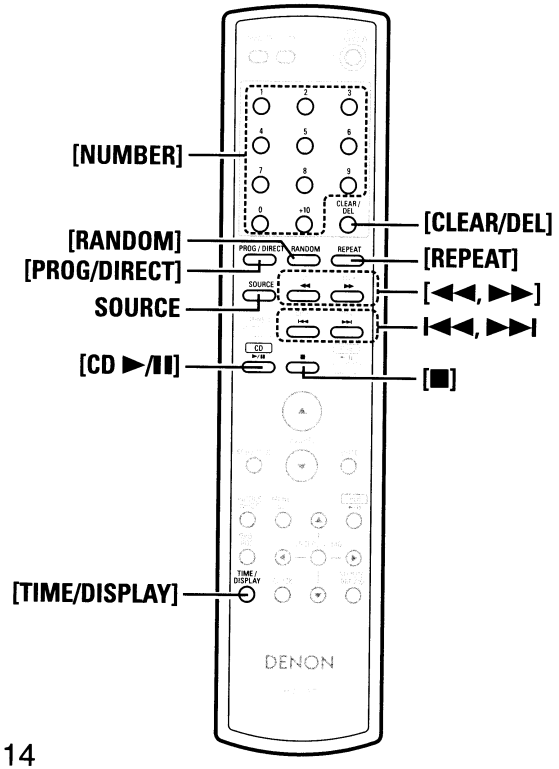

CD Playback

Playing CDs

Press <►/II> or [CD ►/II].
The "►" indicator lights and playback begins.

- If the function is set to something other than "CD", press **[CD ►/II]** to switch the function to "CD" and start playback (☞page 24 "Auto Function Selector Function").
- The function can also be switched to "CD" using **SOURCE**.

❑ Stopping Playback
Press **<BAND/■>** or **[■]**.

❑ Stopping Playback Temporarily
Press **<►/II>** or **[CD ►/II]**.
The "II" is displayed.
※ To resume playback, press **<►/II>** or **[CD ►/II]**.

❑ Fast-Forwarding and Fast-Reversing (searching)
During playback, press and hold in **[◄◄, ►►]**.

❑ Moving to the Beginning of Tracks (skipping)
During playback, press **I◄◄, ►►I**.
※ The disc is skipped the number of tracks equal to the number of times the button is pressed.
※ When pressed once in the return direction, playback returns to the beginning of the currently playing track.

❑ To Play the Desired Track (Remote Control Unit Only)
Press **[NUMBER]** (**0** ~ **9**, **+10**) to select the track.
[Example] : Track 4 : **[4]**
[Example] : Track 12 : **[+10]**, **[2]**
[Example] : Track 20 : **[+10]**, **[+10]**, **[0]**

Playing Repeatedly <Repeat Playback>

Press [REPEAT].
Playback in the respective repeat mode starts.

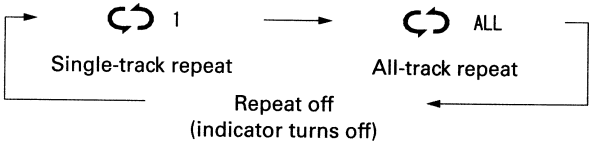

[Selectable items]

1 (Single-track repeat)	: Only 1 track is played repeatedly.
ALL (All-track repeat)	: All tracks are played repeatedly.
Repeat off (indicator turns off)	: Normal playback resumes.

Playing Random Order <Random Playback>

1 **In the stop mode, press [RANDOM].**
The "RANDOM" indicator lights.

2 **Press <►/II> or [CD ►/II].**
The tracks start playing in random order.

NOTE
Random play cannot be set or canceled during playback.

❑ Canceling Random Playback
In the stop mode, press **[RANDOM]**.
The "RANDOM" indicator turns off.

NOTE
When **[REPEAT]** pressed during random playback, the tracks are played in a different random order after this turn.

Playing Tracks in the Desired Order

<Program playback>

Up to 25 tracks can be programmed.

1 **In the stop mode, press [PROG/DIRECT].**
The "PGM" indicator lights.

2 **Use [NUMBER] (0 ~ 9, +10) to select the traks.**

※ **[Example]** To program tracks 3, 12, 7 to play in that order:
Press **[PROG/DIRECT]**, **[3]**, **[+10]**, **[2]**, **[7]**.

3 **Press <►/II> or [CD ►/II].**
Playback starts in the programmed order.

❑ Checking the order of the programmed tracks

In the stop mode, press ►►I or I◄◄.
The track numbers are displayed in the programmed order each time the button is pressed.

❑ To clear the last track programmed

In the stop mode, press **[CLEAR/DEL]**.
The last track programmed is cleared each time the button is pressed.

❑ To clear one programmed track at a time

In the stop mode, use ►►I or I◄◄ to select the track to be cleared, then press **[CLEAR/DEL]**.

❑ Clearing the all programmed track

In the stop mode, press **[PROG/DIRECT]**.
The "PGM" indicator turns off.

When **[REPEAT]** is pressed, the tracks are played repeatedly in the programmed order.

Switching the Display

Press [TIME/DISPLAY].


Elapsed time of currently playing track
Remaining time of currently playing track
Remaining time for all remaining tracks

※ The display switches each time the button is pressed.

Playback of MP3 and WMA Files

There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA (Windows Media® Audio) format. The music (files) downloaded from such sites can be stored on CD-R or CD-RW discs and played on the RCD-M37.

"Windows Media" and "Windows" are registered trademarks or trademarks in the United States and other countries of Microsoft Corporation of the United States.

About the MP3 and WMA Formats That Can be Played

CD-R and CD-RW discs created in the format described below can be played.

Writing software format

ISO9660 level 1

※ When written in other formats, it may not be possible to play the disc properly.

Maximum number of playable files and folders

Total number of folders + files: 512
Maximum number of files in a folder: 255

File format

MPEG-1 Audio Layer-3
WMA (Windows Media Audio)

Tag data

ID3-Tag (Ver.1x)
META-Tag (Compatible with title, artist and album names)

Playable MP3/WMA file			
File format	**Sampling frequency**	**Bit rate**	**Extension**
MP3	32, 44.1, 48 kHz	32 ~ 320 kbps	.MP3
WMA	32, 44.1, 48 kHz	64 ~ 160 kbps	.WMA

- Be sure to give files the extension ".MP3" or ".WMA". Files with any other extensions or with no extensions cannot be played.
- Recordings you have made should only be used for your personal enjoyment, and as per copyright laws may not be used in other ways without permission of the copyright holder.

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

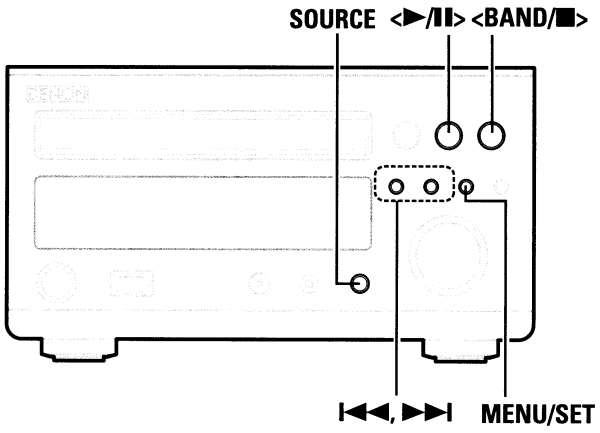

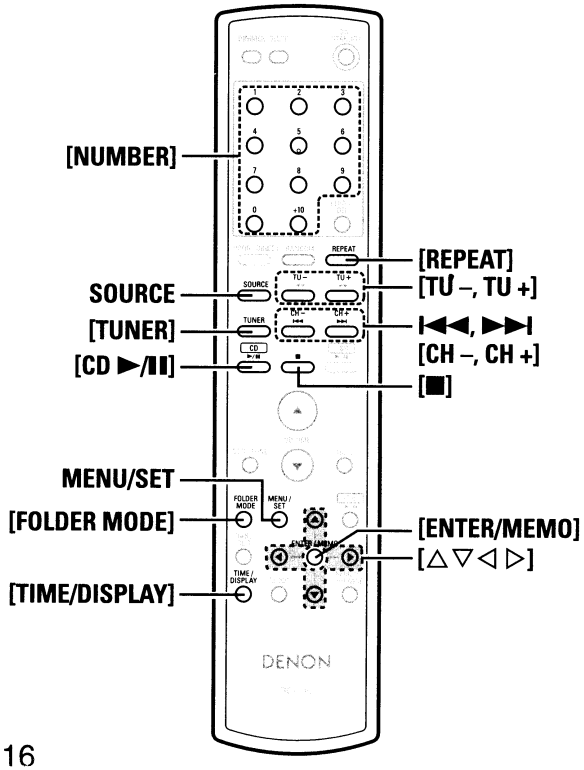

Playing MP3 and WMA Files

1 **Load a CD-R or CD-RW disc containing music files in the MP3 or WMA format into the disc tray (☞ page 3).**

2 **Press [FOLDER MODE] and select "Folder Mode" or "Disc Mode".**

【About the display】
When "Folder Mode" is selected ····· "FLD" is displayed.
When "Disc Mode" is selected ····· "FLD" is not displayed.
Folder Mode :
All the files in the selected folder are played.
Disc Mode :
After the selected folder and files are played, all the files in all the folders are played.

3 **Use [△▽] to select the folder to be played.**

4 **Use I◄◄, ►►I or [◁ ▷] to select the file to be played.**

5 **Press <►/II> or [CD ►/II].**

❑ To switch the Folder or File During Playback

- **Folder**
  Use [△▽] to select the folder.
- **File**
  Use I◄◄, ►►I to select the file, or use **[NUMBER]** (**0** ~ **9**, **+10**) to select the file number.

※ The file numbers are set automatically when the disc is loaded.

Copyright-protected files cannot be played.
(The "Not Support" is displayed.)
Note that depending on the software used for burning and other conditions, some files may not play or display correctly.

❑ Switching the Display

During playback, press **[TIME/DISPLAY]**.

File name display → Title/artist display → Title/album display → File name display

※ The characters that can be displayed are as follows:

A to Z a to z 0 to 9 ^ ' ( ) * + , - . / = (space)

❑ To Play Repeatedly

Press **[REPEAT]**.
Playback starts in the respective repeat mode.
※ The selectable repeat modes differ in the "Folder Mode" and the "Disc Mode".

When "Folder Mode" is selected:

1 FLD (Single-track repeat) → FLD (Repeat of all the tracks in the folder) → Repeat off → 1 FLD

When "Disc Mode" is selected:

1 (Single-track repeat) → ALL (All-track repeat) → Repeat off (indicator turns off) → 1

[Selectable items]

When "Folder Mode" is selected:

1FLD : Only the selected track is played repeatedly.

FLD : All the files in the selected folder are played repeatedly.

FLD : Folder mode playback resumes.

When "Disc Mode" is selected:

"Playing Repeatedly <Repeat playback>" (☞ page 14)

❑ Setting random playback

"Playing Random Order <Random playback>" (☞ page 14)

Programmed playback is not possible with MP3/WMA discs.

TUNER Playback

Tuning in Broadcast Stations

Connect the antenna beforehand (☞page 10).

1 Press [TUNER] or <BAND/■> to select the reception band.

→ FM AUTO → FM MONO → AM →

[About the display]
When FM AUTO is selected ..... "AUTO" is displayed.
When FM MONO is selected ..... "MONO" is displayed.
When AM is selected ..... The reception mode is not displayed.

2 Use <I◄◄/–, +/►►I> or [TU –, TU +] to select the reception band.

When a station is received, the "TUNED" indication will light.

- If the function is set to something other than "TUNER", press **[TUNER]** to switch the function to "TUNER" (☞page 24 "Auto Function Selector Function").
- The function can also be switched to "TUNER" using **SOURCE**.

❑ To Tune Automatically

Press and hold in **<I◄◄/–, +/►►I>** or **[TU –, TU +]** to automatically search and tune in broadcast stations.

※ Stations whose signal is weak cannot be tuned in.

❑ To Stop Auto Tuning

Press **<I◄◄/–, +/►►I>** or **[TU –, TU +]**.

❑ To Tune Manually

The reception frequency switches each time **<I◄◄/–, +/►►I>** or **[TU –, TU +]** is pressed.

A humming sound may be heard when using a TV nearby while receiving AM programs. If this happens, move the system as far from the TV as possible.

About the FM Broadcast Reception Status Display

The "ST" indicator lights when receiving stereo broadcasts.

If the signal is weak and stable stereo reception is not possible, select "FM MONO" to receive in monaural.

About Switching the Tuning Mode and Preset Mode

Use **<I◄◄/–, +/►►I>** to perform the tuning and preset channel operations. Switch to the mode to be operated before operating.

❑ To switch to the preset mode

Press **<+/►►I>** while pressing **<BAND/■>**.
The "PRESET" indicator flashes for about 5 seconds.

❑ To switch to the tuning mode

Press **<I◄◄/–>** while pressing **<BAND/■>**.
The "TUNING" indicator flashes for about 5 seconds.

Automatically Presetting FM Stations (Auto Preset)

Up to 40 stations can be preset.
Auto preset is not possible with AM broadcast stations.

1 Press [TUNER] to select "FM AUTO" or "FM MONO".

2 Press and hold in MENU/SET.

The "AUTO PRESET" is displayed.

3 Press MENU/SET again.

"Search" flashes and auto presetting starts.

Broadcast stations whose antenna signal are weak cannot be preset automatically. If you wish to preset such stations, tune them in manually.

❑ To Cancel Auto Presetting

Press **<BAND/■>** or **[■]**.
The "Search" indicator turns off.

Presetting FM/AM Stations Manually

Up to 40 stations (total for AM and FM) can be preset.

1 Tune in the station.

2 Press [ENTER/MEMO].

The smallest non-registered preset number flashes.

3 Use <I◄◄/–, +/►►I>, [CH –, CH +] or [◁ ▷] to select the number, then press [ENTER/MEMO].

The preset number, reception band and reception frequency are displayed.

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

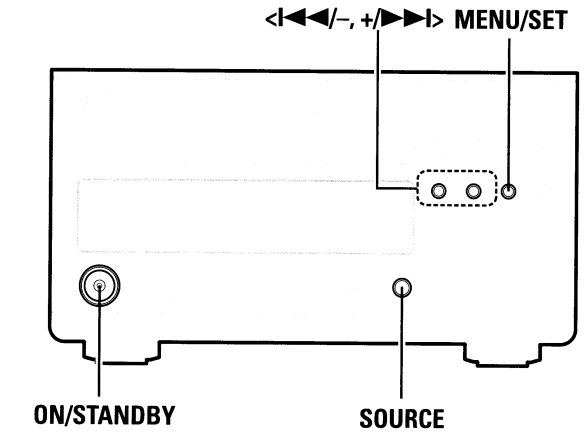

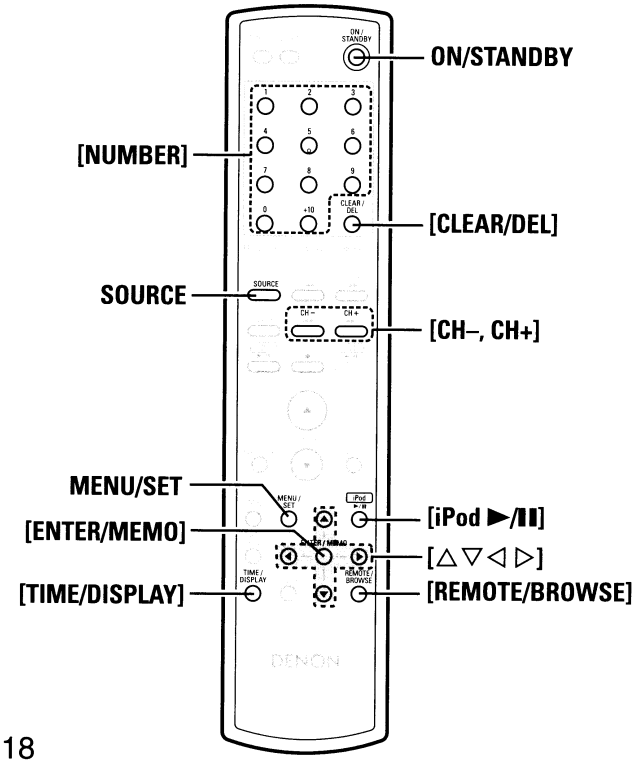

Listening to Preset Stations

Use <I◄◄/–, +/►►I>, [CH –, CH +] or [NUMBER] (0 ~ 9, +10) to select the preset number.

※ Operate **<I◄◄/–, +/►►I>** after switching to the preset mode (☞page 17).

Naming the Currently Tuned in Broadcast Station

Names of up to 8 characters can be input.

1 Press [NUMBER] (0 ~ 9, +10) for the preset number to be named.

2 Press MENU/SET three times.
The "STATION NAME" is displayed.
※ Operate within 5 seconds.

3 Press [◁ ▷].
The name input mode is set.

4 Use [△▽] to select the character, then press [▷] to set.
※ Characters that can be input.

A to Z a to z 0 to 9 ^ ' ( ) * + , - . / = (space)

※ Press [◁ ▷] to move the cursor.
Use this to correct input characters.

5 Press [ENTER/MEMO].
Naming mode is finished.

❑ Changing the Broadcast Station Name

① Call out the preset name to be changed, then press **MENU/SET** three times.
② Perform steps 3, 4 and 5 at "Naming the Currently Tuned In Broadcast Station".
※ Press **[CLEAR/DEL]** to delete the characters.

iPod® Playback

With the RCD-M37, you can listen to music on an iPod. It is also possible to operate the iPod from the main unit or remote control unit.

Made for iPod

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

※ The iPod may only be used to copy or play contents that are not copyrighted or contents for which copying or playback is legally permitted for your private use as an individual. Be sure to comply with applicable copyright legislation.

Preparations

1 Set the iPod on the DENON Control Dock for iPod.
(☞See the Control Dock for iPod's operating instructions.)

2 Press SOURCE to select "AUX1/Dock".

3 Press [REMOTE/BROWSE] to select the display mode.
The mode switches each time the button is pressed.

[Selectable mode]		Browse mode	Remote mode
Display location		Main unit display	iPod display
Playable files	Audio file	○	○
	Video file	×	○*
Active buttons	Remote control unit (RCD-M37)	○	○
	iPod	×	○

* : Video may not be output, depending on the combination of ASD-1R and iPod.

Listening to Audio

1 **Use [△▽] to select the item, then press [ENTER/MEMO] or [▷] to select the music file to be played.**

2 **Press [iPod ►/II].**
Playback starts.

- If the function is set to something other than "AUX1/Dock", press **[iPod ►/II]** to switch the function to "AUX1/Dock" and start playback. (☞page 24 "Auto Function Selector Function")
- The function can also be switched to "AUX1/Dock" using **SOURCE**.

Remote control and iPod button relations

Remote control unit buttons	iPod buttons	Operation on the RCD-M37
iPod ►/II	►II	Play the track. ※ Play/Pause in remote mode
I◄◄, ►►I	I◄◄, ►►I	Play the track from the beginning/ Play the next track.
	◄◄, ►►	Fast-reverse the track/ Fast-forward the track.
◁, ▷, △, ▽	Click Wheel	Select an item.
ENTER/MEMO	Select	Enter the selection or plays the track.
REMOTE/ BROWSE	–	Switch between the browse mode and the remote mode.
REPEAT	–	Switch the repeat function
RANDOM	–	Switch the shuffle function
MENU/SET	MENU	Display the menu or return to the previous menu.

NOTE

- DENON will accept no responsibility whatsoever for any loss of iPod data.
- Depending on the type of iPod and the software version, some functions may not operate.

To Switch the Display

During playback, press **[TIME/DISPLAY]**.
The display switches each time the button is pressed.

Title name → Artist name → Album title → Title name

Disconnecting the iPod

1 **Press ON/STANDBY to set the standby mode.**

2 **Remove the iPod from the Control Dock for iPod.**

Playing a Portable Audio

Your portable audio player can be connected to the RCD-M37's portable jack to play tracks on the portable audio player.

Connecting a Portable Player

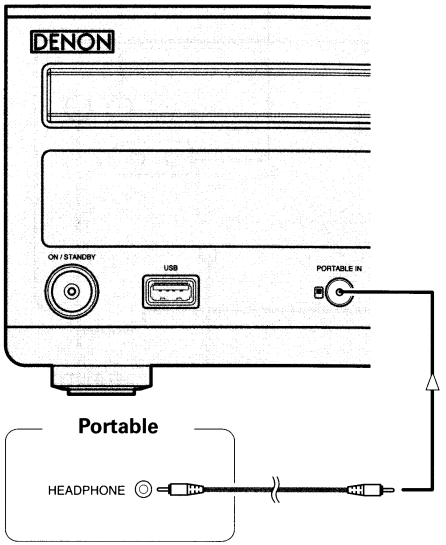

Connect the RCD-M37 and portable audio player using a separately sold mini-stereo audio cable.

Playing the Portable Player

1 **Press SOURCE to select "PORTABLE IN".**

2 **Play the portable audio player.**
The Portable Audio are output.
※ Also read the portable audio player's operating instructions.

NOTE

When using the portable player's headphones jack, set the volume on the portable player to an appropriate level.

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

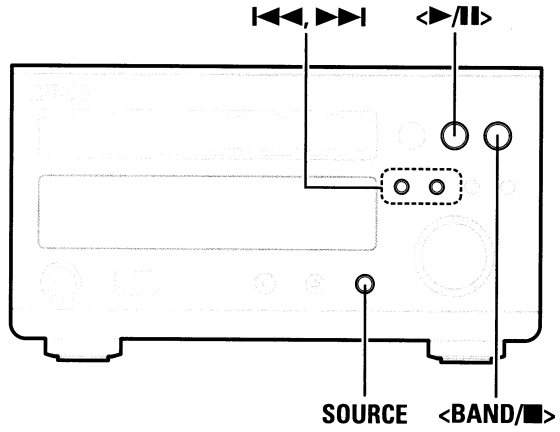

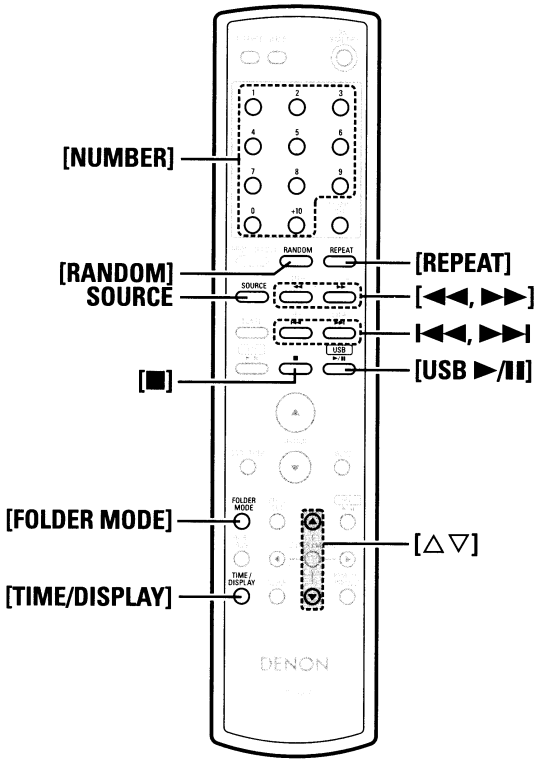

USB Playback

Playable USB Memory Formats

Files stored on USB memory devices created in the formats below can be played.

USB-Compatible File Systems

"FAT16" or "FAT32"

※ If the USB memory device is divided into multiple partitions, only the top drive can be selected.

Maximum number of playable files and folders

Maximum number of files in a folder: 255
Maximum number of folders: 255

File Format

MPEG-1 Audio Layer-3
WMA (Windows Media Audio)

Tag Data

ID3-Tag (Ver.1x)
META-Tag (Compatible with title, artist and album names)

Playable MP3/WMA file			
File format	**Sampling frequency**	**Bit rate**	**Extension**
MP3	32, 44.1, 48 kHz	32 ~ 320 kbps	.mp3
WMA	32, 44.1, 48 kHz	64 ~ 192 kbps	.wma

Only music files that are not copyright-protected can be played on this set.

※ Contents downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc., on a computer may be copyright protected, depending on the computer's settings.

Basic Operation

Set the USB port to be used.

Playback starts automatically.

※ When a USB memory device is connected, playback starts automatically when the operation below is performed.
- Switch the function to "USB" using **SOURCE**.
- Press **[USB ►/II]**.

- If the function is set to something other than "USB", press **[USB ►/II]** to switch the function to "USB" and start playback. (☞page 24 "Auto Function Selector Function")
- The function can also be switched to "USB" using **SOURCE**.

❑ To Switch the "Folder Mode" or "Memory Mode"

Press **[FOLDER MODE]**.

【About the display】

When "Folder Mode" is selected ····· "FLD" is displayed.

When "Memory Mode" is selected ···· "FLD" is not displayed.

Folder Mode :

All the files in the selected folder are played.

Memory Mode :

After the selected folder and files are played, all the files in all the folders are played.

❑ To Switch the Folder or File During Playback

- **Folder**

  Use **[△▽]** to select the folder.

- **File**

  Use **I◄◄**, **►►I** to select the file, or use **[NUMBER]** (**0 ~ 9**, **+10**) to select the file number.

❑ Stopping Playback

Press **<BAND/■>** or **[■]**.

❑ Stopping Playback Temporarily

Press **<►/II>** or **[USB ►/II]**.

The "**II**" is displayed.

※ To resume playback, press **<►/II>** or **[USB ►/II]**.

❑ Fast-Forwarding and Fast-Reversing (searching)

During playback, press and hold in **[◄◄, ►►]**.

❑ Playing Repeatedly (Memory mode only)

Press **[REPEAT]**.

❑ Playing Random Order (Memory mode only)

In the stop mode, press **[RANDOM]**.

❑ Switching the Display

During playback, press **[TIME/DISPLAY]**.

File name display → Title/artist display → Title/album display → File name display

※ The characters that can be displayed are as follows:

A to Z a to z 0 to 9 ^ ' ( ) * + , - . / = (space)

NOTE

- DENON will take no responsibility whatsoever for any loss or damage to data on USB memory devices when using the USB memory device connected to the RCD-M37.
- USB memory devices will not work via a USB hub.
- DENON does not guarantee that all USB memory devices will operate or be suppled power. When using a USB connection type portable hard disk of the type for which power can be supplied by connecting an AC adapter, we recommend using the AC adapter.

Setting the Timer

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

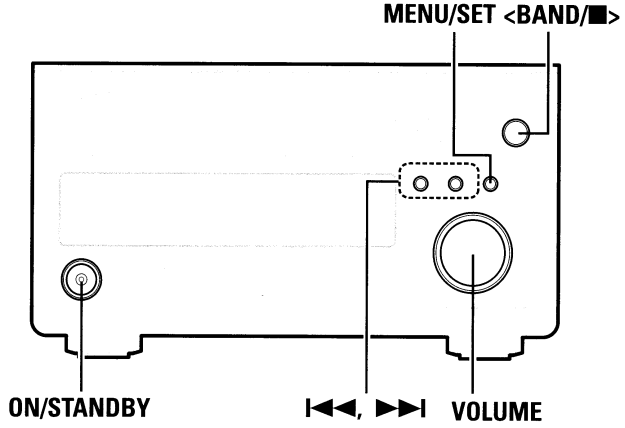

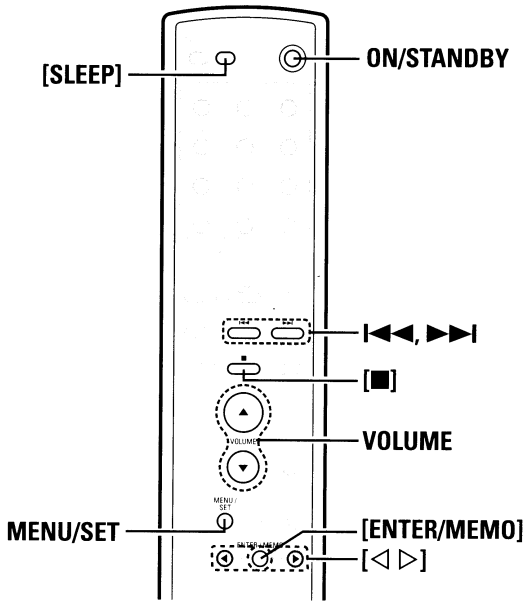

Timer Playback

The everyday timer, once timer and sleep timer can be set.

Timer order of priority

The order of priority when the times set for the different timers overlap is as follows:
1. Sleep timer
2. Once timer
3. Everyday timer

Setting the Timer

- **Everyday timer playback**
  Playback starts (the power turns on) and stops (the power turns off) at the set times each day.
- **Once timer playback**
  Playback starts (the power turns on) and stops (the power turns off) once only at the set times.

1 **Press MENU/SET.**
The "TIMER" is displayed.
※ Operate within 5 seconds.

2 **Use I◄◄, ►►I or [◁ ▷] to select the timer play mode.**
ONCE ↔ EVERYDAY
* "1" : Once timer, "E" : Everyday timer



3 **Press MENU/SET or [ENTER/MEMO].**
The timer play mode is set.

4 **Use I◄◄, ►►I or [◁ ▷] to select the function to be played.**
CD → TUNER → AUX1 (AUX1/Dock) → AUX2 → USB → CD

5 **Press MENU/SET or [ENTER/MEMO].**
The function to be played is set.
※ If the function is set to anything other than the tuner, the setting display shown in step 7 is displayed.

【Only when the "TUNER" function is selected】

6 **-① Use I◄◄, ►►I or [◁ ▷] to select the preset number.**



-② Press MENU/SET or [ENTER/MEMO].
The broadcast station for the selected preset number is set.

7 **Use I◄◄, ►►I or [◁ ▷] to set the "hours" for the timer start time.**

8 **Press MENU/SET or [ENTER/MEMO].**
The "hours" for the timer start time are set.

9 **Use I◄◄, ►►I or [◁ ▷] to set the "minutes" for the timer start time.**



10 **Press MENU/SET or [ENTER/MEMO].**
The "minutes" for the timer start time are set.

11 **Use I◄◄, ►►I or [◁ ▷] to set the "hours" for the timer stop time.**



12 **Press MENU/SET or [ENTER/MEMO].**
The "hours" for the timer stop time are set.

13 Use ⏮, ⏭ or [◁ ▷] to set the "minutes" for the timer stop time.



14 Press **MENU/SET** or **[ENTER/MEMO]**.
The "minutes" for the timer stop time are set.

15 Use ⏮, ⏭ or [◁ ▷] to turn timer playback on.



Display	Once timer	Everyday timer
1_off/E_off	OFF	OFF
1_on/E_on	ON	ON
1_off/E_on	OFF	ON
1_on/E_off	ON	OFF

※ When turned on, " ◷ " lights.

16 Press **MENU/SET** or **[ENTER/MEMO]**.
The timer setting is set.

17 Adjust the volume for when the timer starts using **VOLUME**.

18 Set the power to standby.
The timer playback standby mode is set.

❑ Canceling the timer
Press **MENU/SET** twice.
At step 15 under "Setting the Timer", use ⏮, ⏭ or [◁ ▷] to turn off the timer on/off indicator and turn off " ◷ ".

❑ To check the timer settings
① Press **MENU/SET**.
The "TIMER" is displayed.
② Press ⏮, ⏭ or [◁ ▷].
The "EVERYDAY" or "ONCE" is displayed.
③ Press **MENU/SET**.
The display switches each time the button is pressed.

❑ To change the timer settings
Repeat the procedure under "Setting the Timer" (☞page 22).

❑ To change the setting while setting the timer
Press **<BAND/■>** or **[■]**.
Return to step 2 under "Setting the Timer" (☞page 22). Repeat the procedure.

❑ To clear the timer settings
① Press **MENU/SET**.
The "TIMER" is displayed.
② Press ⏮, ⏭ or [◁ ▷].
The "EVERYDAY" or "ONCE" is displayed.
③ While "EVERYDAY" or "ONCE" is displayed, press **<BAND/■>** or **[■]** for at least 2 seconds.

❑ If there is a power failure
The time setting and the timer settings are cleared. Reset the current time, then reset the timer.

❑ When performing a timer setting with DENON control dock for iPod (ASD-3N or ASD-3W)
Pause the track you want to play, and keep the power on for DENON control dock for iPod.

When the function is set to iPod, the timer cannot be set. To set the timer, first switch to a function other than iPod.

Sleep Timer Playback
Use this function to automatically switch the power to the standby mode after a specific amount of time (minutes). The sleep timer can be set to up to 90 minutes, in steps of 10 minutes.

1 Select and play the desired function.

2 Press **[SLEEP]** and select the setting time.

90 → 80 → 70 → 60 → 50 → 40 → 30 → OFF ← 10 ← 20
("SLEEP " indicator turns off)

The "SLEEP" indicator flashes.

3 Press **[SLEEP]** while the "SLEEP" indicator is flashing.
The set time is displayed.
※ After about 5 seconds, the set returns to as it was before the sleep timer was set, and the "SLEEP" indicator lights.

❑ Canceling the sleep timer
Either press **[SLEEP]** at step 2 under "Sleep Timer Playback" until "OFF" is displayed, or press **ON/STANDBY**.

❑ To change the setting while the sleep timer is set
Press **[SLEEP]**.

❑ Checking the time remaining until the sleep timer starts
Press **[SLEEP]**.
Return to step 2 under "Sleep Timer Playback".

Other Functions

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control unit → **BUTTON**
Button only on the main unit → **<BUTTON>**
Button only on the remote control unit → **[BUTTON]**

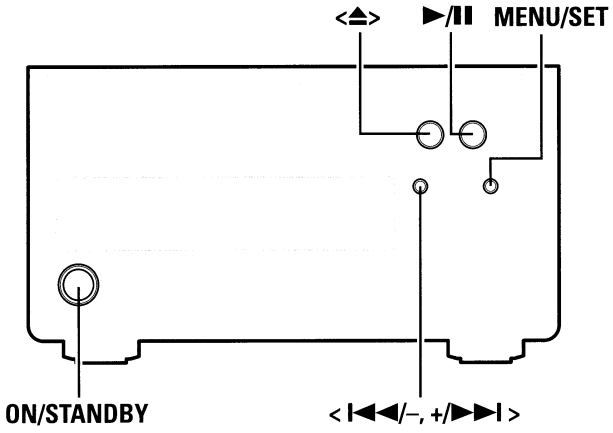

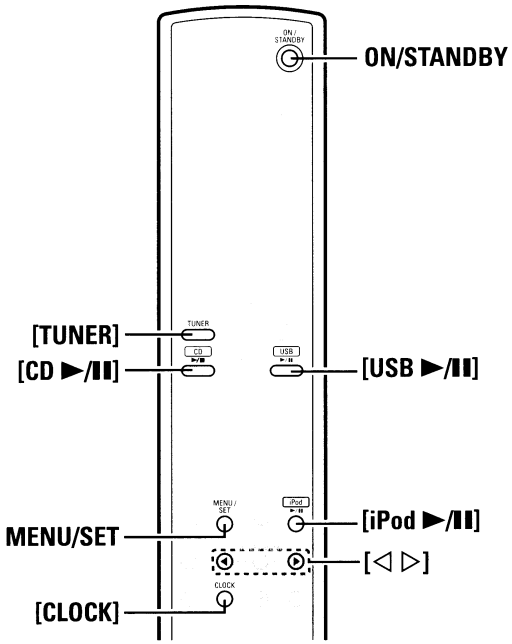

Convenient Functions

Auto Power On

When the power is in standby, the power turns on when any of the buttons below other than **ON/STANDBY** is operated, and the respective operation is performed.

- **<▲>** ..... The disc tray opens.
- **►/II** for the different functions ..... Playback of that source starts.
- **[TUNER]** ..... Playback of the tuner starts.

NOTE

The Auto Power On function cannot be used with iPods.

Auto Function Selector Function

When one of the buttons below is pressed, the function switches to the respective function and playback of that source starts.

- **[CD ►/II]** ..... The function switches to "CD" and the CD starts playing.
- **[USB ►/II]** ..... The function switches to "USB" and the USB starts playing.
- **[iPod ►/II]** ..... The function switches to "AUX1/Dock" and the iPod starts playing.
- **[TUNER]** ..... The functions switches to "TUNER" and the band last set is tuned in.

Last Function Memory

This stores the settings as they were directly before the standby mode was set.
When the power is turned back on, the settings are restored to as they were directly before the standby mode was set.

Resetting the Microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.
When the microprocessor is reset, all the settings are reset to their default values.

1 **Unplug the power cord.**

2 **Plug the power cord into a power outlet while pressing <I◄◄/–> and <MENU/SET> simultaneously.**

3 **Press [CLOCK].**
The "AM12:00" display flashes.

If "AM12:00" is not flashed in step 3, start over from step 1.

Using an Optimizing Filter

An optimizing filter suited for the properties of the speakers (SC-M37) can be used.

1 **Press MENU/SET to select "SP OPTIMISE".**

2 **Use <I◄◄/–, +/►►I> or [◁ ▷] to select "ON" or "OFF".**

3 **Press MENU/SET to set.**

[Selectable items]

ON : The response is optimized for the speakers (SC-M37, supplied).
OFF : The response is flat.

When the function is set to iPod, the set cannot be switched between on and off.

Troubleshooting

If a problem should arise, first check the following:
1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other components operating properly?
If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.
In this case, disconnect the power immediately and contact your store of purchase.

[General]

Symptom	Cause	Countermeasure	Page
Set does not operate properly.	• External noise or interference is causing the set to malfunction.	• Reset the microprocessor.	24
Display not lit and sound not produced when power switch set to on.	• Power cord not plugged in securely.	• Check the connections on the set's rear panel and the connection of the power plug to the power outlet.	11
Display lit but sound not produced.	• Device you want to play and set input source do not match. • Volume control set to minimum. • MUTING is on.	• Select an appropriate input source. • Turn volume up to suitable level. • Switch off MUTING.	13 13 13
Display is off.	• The Dimmer setting is set to "OFF".	• Set to something other than "OFF".	13
Power turns off suddenly and power indicator flashes red.	• Protection circuit activated due to rise of internal temperature. • Core wires of two speakers are touching each other or a core wire is sticking out of the terminal and touching the set's rear panel, activating the protection circuit. • Set is damaged.	• Turn off the power, wait for the set to fully cool down, then turn the power back on. • Place the set in a well-ventilated place. • First unplug the power cord, then twist the core wires tightly or terminate the speaker cables, then reconnect. • Turn off the power and contact a DENON service center.	9 9 9 –

[Remote Control Unit]

Symptom	Cause	Countermeasure	Page
Set does not work properly when remote control unit operated.	• Batteries are worn. • You are operating outside of the specified range. • Obstacle between main unit and remote control unit. • The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. • The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.).	• Replace with new batteries. • Operate within the specified range. • Remove the obstacle. • Insert the batteries in the proper direction, following the polarity marks in the battery compartment. • Move the set to a place in which the remote control sensor will not be exposed to strong light.	3 4 4 3 4

[CD]

Symptom	Cause	Countermeasure	Page
"00 Tr 00 : 00" is shown on the display even though a CD is loaded.	• The disc is not properly loaded.	• Reload the disc.	3
Disc is not played when **CD ▶/II** button is pressed.	• The disc is dirty or scratched.	• Wipe the dirt off the disc or replace the disc.	3
A specific part of a disc is not played.	• The disc is dirty or scratched.	• Wipe the dirt off the disc or replace the disc.	3
A CD-R or CD-RW disc cannot be played.	• The disc has not been finalized. • The recording conditions are bad or the quality of the disc itself it poor.	• Finalize the disc then play it. • Use a properly recorded disc.	2 –
MP3 and WMA files cannot be played.	• The file formats, extensions or settings made when disc was created are not compatible with the RCD-M37.	• Create discs with file formats, extensions or settings compatible with the RCD-M37.	15

[Tuner]

Symptom	Cause	Countermeasure	Page
Continuous noise is heard when receiving FM programs.	• Antenna cable is not properly connected.	• Connect the antenna cable properly. • Connect an outdoor antenna.	10 –
Hissing or continuous noise is heard when receiving AM programs.	• This may be noise from a TV or interference from a radio station.	• Turn off the TV. • Change the position and direction of the AM loop antenna.	– 10

[iPod]

Symptom	Cause	Countermeasure	Page
iPod cannot be played.	• Device you want to play and set input source do not match. • Cable is not properly connected. • Control Dock for iPod's AC adapter is not connected to power outlet.	• Select an appropriate input source. • Reconnect. • Plug the Control Dock for iPod's AC adapter into a power outlet.	18 10 –

[USB]

Symptom	Cause	Countermeasure	Page
When a USB memory device is connected, "USB" is not displayed.	• The set cannot recognize a USB memory device. • A USB memory device not conforming to mass storage class or MTP standards is connected. • A USB memory device that the set cannot recognize is connected. • USB memory device is connected via USB hub.	• Check the connection. • Connect a USB memory device conforming to mass storage class or MTP standards. • This is not a malfunction. DENON does not guarantee that all USB memory devices will operate or receive power. • Connect the USB memory device directly to the USB port.	11 – – –
Files on a USB memory device cannot be played.	• USB memory device is in format other than FAT16 or FAT32. • USB memory device is divided into multiple partitions. • Files are stored in a non-compatible format. • You are attempting to play a file that is copyright protected.	• Set the format to FAT16 or FAT32. For details, refer to the USB memory device's operating instructions. • When divided into multiple partitions, only files stored in the top partition can be played. • Record the files in a compatible format. • Files that are copyright protected cannot be played on this set.	– – 20 20

Specifications

❑ Audio section

- **Power amplifer**

Rated output: 30 W + 30 W (6 Ω/ohms, 1 kHz T.H.D 10 %)

❑ Tuner section

Reception frequency range: FM: 87.5 MHz ~ 107.9 MHz AM: 520 kHz ~ 1710 kHz
Receiving sensitivity: FM: 1.5 µV/75 Ω/ohms AM: 20 µV
FM stereo separation: 35 dB (1 kHz)

❑ CD section

Playback frequency response: 2 Hz ~ 20 kHz
Wow & flutter: Below measurable limits (± 0.001 %)
Sampling frequency: 44.1 kHz

❑ Clock/Timer section

Clock method: Crystal oscillator (Within 1 ~ 2 minutes per month)
Timer: Everyday/Once timer: One system each
Sleep timer: 90 minutes, maximum

❑ General

Power supply: AC 120 V, 60 Hz
Power consumption: 65 W
Approx. 0.3 W (standby)
Maximum external dimensions: 210 (W) x 115 (H) x 308.5 (D) mm (8-17/64" x 4-33/64" x 12-9/64")
Weight: 4.3 kg (9 lbs 7 oz)

❑ Remote control unit (RC-1097)

Remote control method: IR pulse method
Power supply: R03/AAA Type (two batteries)
Maximum external dimensions: 49 (W) x 220 (H) x 24 (D) mm (1-59/64" x 8-21/32" x 15/16")
Weight: 110 g (Approx. 3 oz) (including batteries)

※ For purposes of improvement, specifications and design are subject to change without notice.

DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 5411 10028 000D

DENON

SPEAKER

SC-M37

Owner's Manual

Bedienungsanleitung

Manuel de l'Utilisateur

Manuale delle istruzioni

Manual del usuario

Gebruiksaanwijzing

Bruksanvisning

❑ SAFETY PRECAUTIONS

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

❑ For Europe model

• DECLARATION OF CONFORMITY
We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:
EN55013 and EN55020.
Following the provisions of 2004/108/EC Directive.

• ÜBEREINSTIMMUNGSERKLÄRUNG
Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:
EN55013 und EN55020.
Entspricht den Verordnungen der Direktive 2004/108/EC.

• DECLARATION DE CONFORMITE
Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:
EN55013 et EN55020.
D'après les dispositions de la Directive 2004/108/EC.

• DICHIARAZIONE DI CONFORMITÀ
Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:
EN55013 e EN55020.
In conformità con le condizioni delle direttive 2004/108/EC.

• DECLARACIÓN DE CONFORMIDAD
Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares:
EN55013 y EN55020.
Siguiendo las provisiones de las Directivas 2004/108/EC.

• EENVORMIGHEIDSVERKLARING
Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:
EN55013 en EN55020.
Volgens de bepalingen van de Richtlijnen 2004/108/EC.

• ÖVERENSSTÄMMELSESINTYG
Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:
EN55013 och EN55020.
Enligt stadgarna i direktiv 2004/108/EC.

DENON Europe
Division of D&M Germany GmbH
An der Landwehr 19, Nettetal,
D-41334 Germany

A NOTE ABOUT RECYCLING:
This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.
When discarding the unit, comply with local rules or regulations.
Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning chemical waste.
This product and the accessories, packed together constitute the applicable product according to the WEEE directive except batteries.

HINWEIS ZUM RECYCLING:
Das Verpackungsmaterial dieses Produktes ist für zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.
Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.
Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte geben Sie die Batterien gemäß örtlichen Bestimmungen an den Sammelstellen oder Sondermüllplätzen ab.
Dieses Produkt zusammen mit den Zubehörteilen ist das geltende Produkt der WEEE-Direktive, davon ausgenommen sind die Batterien.

UNE REMARQUE CONCERNANT LE RECYCLAGE:
Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer de tout matériau conformément aux réglements de recylage locaux.
Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations locales.
Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux réglements locaux concernant les déchets chimiques.
Ce produit et les accessoires emballés ensemble sont des produits conformes à la directive DEEE sauf pour les piles.

NOTA RELATIVA AL RICICLAGGIO:
I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.
Per smaltire l'unità, osservare la normativa in vigore nel luogo di utilizzo.
Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.
Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:
Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.
Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.
Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.
Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING WAT BETREFT HET RECYCLEREN:
Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.
Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.
Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.
Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

EN KOMMENTAR OM ÅTERVINNING:
Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.
När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.
Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.
Denna apparat och de tillbehör som levereras med den är de som uppfyller gällande WEEE-direktiv, med undantag av batterierna.

❑ NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA

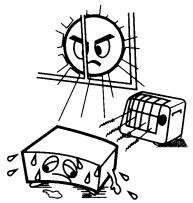

- Avoid high temperatures.
  Allow for sufficient heat dispersion when installed in a rack.
- Vermeiden Sie hohe Temperaturen.
  Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.
- Eviter des températures élevées.
  Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Evitate di esporre l'unità a temperature elevate.
  Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.
- Evite altas temperaturas.
  Permite la suficiente dispersión del calor cuando está instalado en la consola.
- Vermijd hoge temperaturen.
  Zorg vocr een degelijk hitteafvoer indien het apparaat op een rek wordt geplaatst.
- Undvik höga temperaturer.
  Se till att det finns möjlighet till god värmeavledning vid montering i ett rack.

- Handle the power cord carefully.
  Hold the plug when unplugging the cord.
- Gehen Sie vorsichtig mit dem Netzkabel um.
  Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.
- Manipuler le cordon d'alimentation avec précaution.
  Tenir la prise lors du débranchement du cordon.
- Manneggiate il filo di alimentazione con cura.
  Agite per la spina quando scollegate il cavo dalla presa.
- Maneje el cordón de energía con cuidado.
  Sostenga el enchufe cuando desconecte el cordón de energía.
- Hanteer het netsnoer voorzichtig.
  Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.
- Hantera nätkabeln varsamt.
  Håll i kabeln när den kopplas från el-uttaget.

- Keep the apparatus free from moisture, water, and dust.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Mantenga el equipo libre de humedad, agua y polvo.
- Laat geen vochtigheid, water of stof in het apparaat binnendringen.
- Utsätt inte apparaten för fukt, vatten och damm.

- Unplug the power cord when not using the apparatus for long periods of time.
- Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Disinnestate il filo di alimentazione quando avete l'intenzione di non usare il filo di alimentazione per un lungo periodo di tempo.
- Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.
- Neem altijd het netsnoer uit het stopkontakt wanneer het apparaat gedurende een lange periode niet wordt gebruikt.
- Koppla ur nätkabeln om apparaten inte kommer att användas i lång tid.

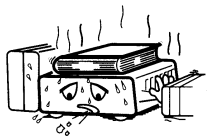

* (For apparatuses with ventilation holes)

- Do not obstruct the ventilation holes.
- Die Belüftungsöffnungen dürfen nicht verdeckt werden.
- Ne pas obstruer les trous d'aération.
- Non coprite i fori di ventilazione.
- No obstruya los orificios de ventilación.
- De ventilatieopeningen mogen niet worden beblokkeerd.
- Täpp inte till ventilationsöppningarna.

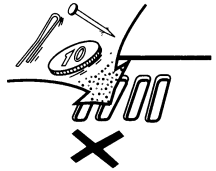

- Do not let foreign objects into the set.
- Keine fremden Gegenstände in das Gerät kommen lassen.
- Ne pas laisser des objets étrangers dans l'appareil.
- E' importante che nessun oggetto e inserito all'interno dell'unità.
- No deje objetos extraños dentro del equipo.
- Laat geen vreemde voorwerpen in dit apparaat vallen.
- Se till att främmande föremål inte tränger in i apparaten.

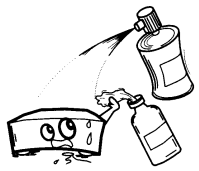

- Do not let insecticides, benzene, and thinner come in contact with the apparatus.
- Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Assicuratevvi che l'unità non venga in contatto con insetticidi, benzolo o solventi.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
- Laat geen insektenverdelgende middelen, benzine of verfverdunner met dit apparaat in kontakt komen.
- Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje.

- Never disassemble or modify the apparatus in any way.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Non smontate mai, né modificate l'unità in nessun modo.
- Nunca desarme o modifique el equipo de ninguna manera.
- Nocit dit apparaat demonteren of op andere wijze modifieren.
- Ta inte isär apparaten och försök inte bygga om den.

CAUTION:
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects battery disposal.
- Do not expose the set to dripping or splashing fluids.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.

ACHTUNG:
- Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden.
- Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.
- Bitte beachten Sie bei der Entsorgung der Batterien die geltenden Umweltbestimmungen.
- Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.
- Auf dem Gerät sollten keinerlei mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.

ATTENTION :
- La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.
- Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.
- Veillez à respecter l'environnement lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Aucun objet conten ant du liquide, par exemple un vase, ne doit étre placé sur l'appareil.

PRECAUZIONI:
- Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via.
- Non posizionate sull'unità fiamme libere, come ad esempio le candele accese.
- Prestate attenzione agli aspetti legati alla tutela dell'ambiente quando si smaltisce la batterie.
- L'apparecchiatura non deve essere esposta a gocciolii o spruzzi.
- Non posizionate sull'apparecchiatura nessun oggetto contenente liquidi, come ad esempio i vasi.

PRECAUCIÓN:
- La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc.
- No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas.
- A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.
- No exponendrà el aparato al goteo o salpicaduras cuando se utilice.
- No se colocaràn sobre el aparato objetos llenos de liquido, como jarros.

WAARSCHUWING:
- De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed, gordijnen, enz.
- Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat.
- Houd u steeds aan de milieuvoorschriften wanneer u gebruikte batterijen wegdoet.
- Stel het apparaat niet bloot aan druppels of spatten.
- Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat.

OBSERVERA:
- Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar, gardiner osv.
- Inga blottade brandkällor, såsom tända ljus, bör placeras på apparaten.
- Tänk på miljöaspekterna när du bortskaffar batteri.
- Apparaten får inte utsättas för vätska.
- Inga objekt med vätskor,såsom vaser, får placeras på apparaten.

Contents

Getting Started
Accessories 1
Before Using 1
Cautions on Installation 1
Acoustic Sponge 2
How to Install 2
Cleaning 2
Other Cautions 2

Connections
Connections 3

Removing the Speaker Net 3

Specifications 4

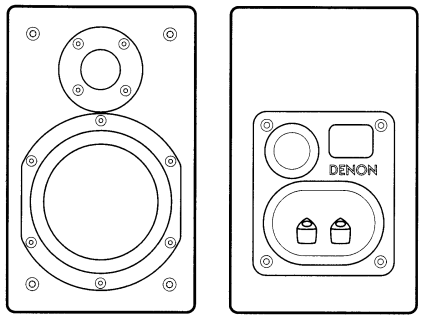

[Front] [Rear]

Note that the illustrations in this instructions may differ from the actual set for explanation purposes.

Getting Started

Thank you for purchasing this DENON product. To ensure proper operation, please read this owner's manual carefully before using the product.
After reading them, be sure to keep them for future reference.

Accessories

Check that the following parts are attached in addition to the main unit:

① Owner's Manual 1
② Service station list 1
③ Speaker cable (Approx. 9.8 ft / 3 m) 2
④ Foam plug 2
⑤ Anti-slip pads (8 pcs. / 1sheet) 1

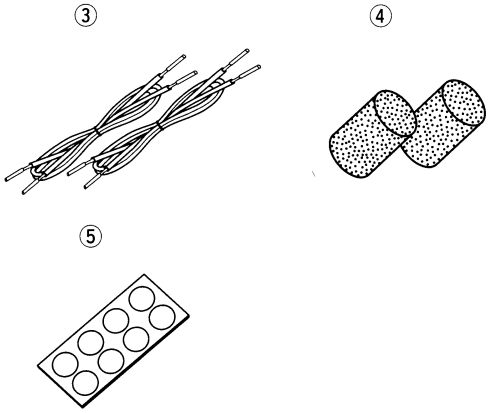

Before Using

Cautions on Installation

The quality of the sound produced from the speaker is affected by the size and type of the room, as well as by the method of installation. Consider the points listed below before installing the speaker.

- If the bass sound is overemphasized when the speakers are installed directly on the floor, set them on concrete blocks or other hard stands.
- Note that placing the speaker on the same stand or shelf as a record player may result in howling.
- Also note that if there is a magnet or any device generating magnetic force nearby, interaction between this device and the speakers can cause the colors on the TV to become blotchy.

WARNING

- Fasten the speaker cables to the wall, etc., to avoid catching them on your hands or feet and causing the unit to fall.
- Be sure to check for safety after installing the speakers. Afterwards, perform safety inspections at regular intervals to make sure there at the speakers will fall.
  DENON will accept no responsibility for damages or accidents caused by inappropriate choice of the place of installation or improper installation procedures.

Acoustic Sponge

When installing on a desktop or in the corner of your room, the bass may emphasized. Insert sound foam plug in the bass-reflex duct at the back of the SC-M37.
You can adjust the bass sound with the amount of sound foam plug you insert.

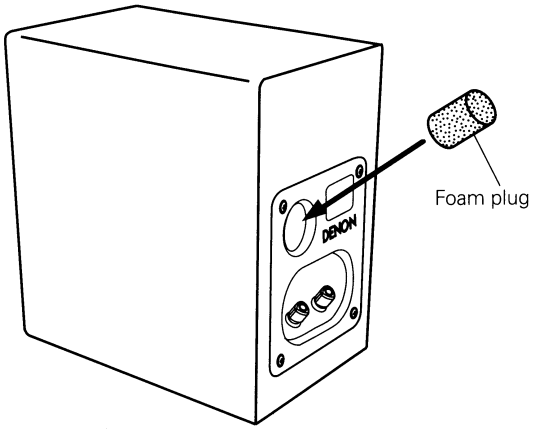

CAUTION

- Do not insert the foam plug too deep. The foam plug could fall in and get stuck inside.
- If the foam plug cannot be removed or falls inside, stop using the unit immediately and consult your store of purchase or your nearest repair and inquiry center.

How to Install

Attach four of the included anti-slip pads to the bottom of the unit as shown on the diagram below.

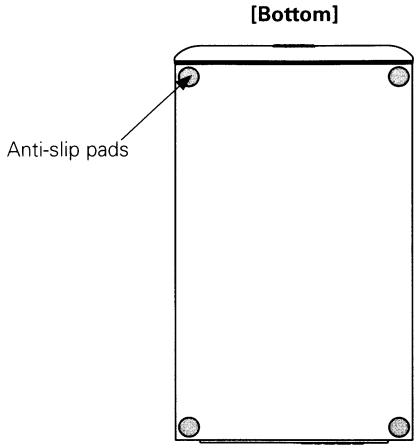

Cleaning

- Use a wiping cloth and wipe lightly to remove dirt from the cabinet and operation panel.
  ※ When using chemically treated cloths, follow the precautions that have been written for them.
- Do not use benzene, thinners, or other organic solvents or insecticides on the main unit since they may cause a change in quality or color.

Other Cautions

- Raising the amplifier's volume excessively and playing with distorted sound could damage the amplifier and speakers. Enjoy the sound at a reasonable volume level.
- When moving the unit, note that applying strong force to the surface of the speaker through the saran net could damage the speaker.

Connections

When connecting, be sure to read the amplifier's owner's manual carefully and connect properly.

- Connect the input terminals on the rear panel of the speaker with the speaker output terminals on the amplifier, using the speaker cables (Supplied).
- Connect the speaker for the left channel to the "L" terminal on the amplifier, the speaker for the right channel to the "R" terminal on the amplifier, making sure to check the polarities ("+" and "–").
- There are various types of speaker output terminals on amplifiers. Check your amplifier's owner's manual.

CAUTION

- Be sure to turn the amplifier's power off before connecting the speakers to the amplifier.
- If the polarities are inverted, the phase may be off and the sound may have no bass component, making it seem unnatural. Be sure to connect the polarities properly.

Connections

Use the included speaker cable to connect the input terminals on the back of the speakers to the amplifier's speaker output terminals.

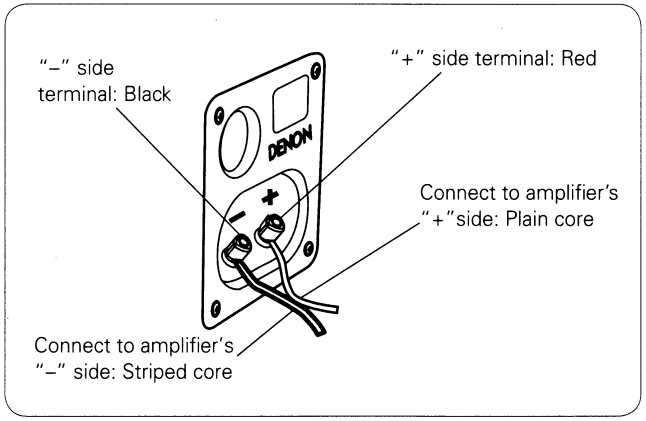
"–" side terminal: Black
"+" side terminal: Red
DENON
Connect to amplifier's "+"side: Plain core
Connect to amplifier's "–" side: Striped core

1 Twist firmly the wires by hand so that they do not stick out and cause short-circuits.

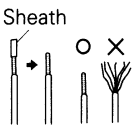

2 Loosen the terminal by turning to the left and insert the speaker cable through the hole in the speaker terminal.

3 Tighten the terminal by turning to the right and check that the core wire is not protruding from the hole.

Once connections are completed, pull gently on the speaker cables to check that they are securely connected.

CAUTION

Do not let the core wires of two speaker cables touch each other. Doing so will short-circuit the amplifier circuitry and damage the amplifier.

Removing the Speaker Net

- The net on the front of the speakers can be removed.
- To remove, grasp both sides of the net and pull forward.
- To mount, line up the projecting pieces in the four corners of the speaker net with the holes in the four corners of the cabinet and press in.

Specifications

Type:	2-way · 2-speakers Low-leakage-flux, Reflex box
Frequency range:	45 Hz ~ 40 kHz
Input impedance:	6 Ω/ohms
Max. input:	60 W (IEC), 120 W (PEAK)
Sensitivity:	86 dB (1 W · 1 m)
Crossover frequency:	3 kHz
Speakers:	12 cm (4-3/4") cone bass-mid x 1 2.5 cm (1") soft dome high range x 1
Maximum external dimensions:	145 (W) x 233 (H) x 234 (D) mm (5-45/64" x 9-11/64" x 9-7/32")
Weight:	3.8 kg (8 lbs 6 oz)

※ For improvement purposes, specifications and design are subject to change without notice.

DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 5411 10061 007D

Accessories

Headphones and Control Dock for iPod®

DENON

AH-D7000 Real Wood
Over-Ear Headphones

- Newly-developed driver unit
- Superior headphone housing for high sound quality

- Neu entwickelter Treibereinheit
- Klanglich optimiertes Kopfhörergehäuse

- Diaphragme nouvellement développée
- Oreillettes de conception supérieure, assurant une excellente qualité sonore

AH-D5000 Real Wood
Over-Ear Headphones

- Micro-fiber diaphragm
- High-purity 7N-OFC cables

- Spezielle Mikrofaser-Membran mit 50 mm Neodym-Magneten
- Als Leiter wird hochreines Kupfer (7N-OFC) eingesetzt

- Membrane micro-fibre
- Le Câble utilisé est de type 7N-OFC

AH-D2000 Black
Over-Ear Headphones

- Micro-fiber diaphragm
- Light-weight magnesium frame

- Spezielle Mikrofaser-Membran mit 50 mm Neodym-Magneten
- Extrem leichte Magnesium-Bügel

- Membrane micro-fibre
- Armature légére, en magnésium

AH-NC732 Black Silver
Noise Canceling Headphones

- Reduce outside noise over 90%
- Foldable construction for easy carrying

- Reduziert Außengeräusche um mehr als 90 %
- Zum einfachen Transport zusammenklappbar

- Réduit les sons extérieurs à plus de 90 %
- Structure pliable facile à transporter

AH-D1001 Black Silver
On-Ear Headphones

- Micro-fiber diaphragm
- 1.3m High quality OFC cabling

- Mikrofaser-Membran mit 40 mm Neodym-Magneten
- 1.3m Signalkabel aus sauerstofffreiem Kupfer (OFC)

- Membrane micro-fibre
- Câblé OFC de haute qualité (1.3m)

AH-D501 Black Silver
On-Ear Headphones

- Housing reversal mechanism allowing one-eared monitoring
- Earpad in an elaborately sewn synthetic leather with a pleasant touch

- Die drehbare aufhängung der Hörergehäuse ermöglichen ein schnelles einseitiges Abhören, z.B. im DJ-Einsatz
- Ohrpolster aus kunstvoll genähtem Leder für angenehmen Hautkontakt

- Mécanisme d'arceau réversible permettant l'écoute du son sur une Oreille pour une écoute de contrôle type DJ
- Les coussinets des écouteurs en cuir synthétique cousu offre un contact agréable

AH-D301 Black Silver
On-Ear Headphones

- Housing reversal mechanism allowing one-eared monitoring
- Large (ø35mm), powerful driver unit

- Die drehbare aufhängung der Hörergehäuse ermöglichen ein schnelles einseitiges Abhören, z.B. im DJ-Einsatz
- Großer (ø35mm) leistungsstarker Treiber

- Mécanisme d'arceau réversible permettant l'écoute du son sur une Oreille pour une écoute de contrôle type DJ
- Grande taille du transducteur pour un son puissant (ø35mm)

AH-P372 Black White
Portable Headphones

- Collapsible structure for easy stowing
- Short 0.5 meter cable and 0.8 meter extension cable included for portable devices

- Zum einfachen Verstauen zusammenklappbar
- Kurzes 0,5-Meter-Kabel und 0,8-Meter-Verlängerungskabel für tragbare Geräte im Lieferumfang enthalten

- Structure télescopique pour une mise en place facile
- Un câble court de 0,5m et un câble de rallonge de 0,8 fournis pour les appareils portables

AH-C751 Black Silver

In-Ear Headphones

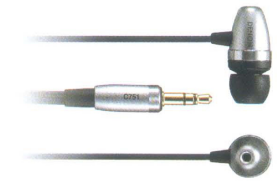

- Aluminum housing
- Aluminum Connector Cover

- Aluminiumgehäuse
- Vergoldeter Klinken-Stecker mit Aluminiumgehäuse

- Embouts aluminium
- Manchon aluminium

AH-C551 Black Silver

In-Ear Headphones

- Aluminum housing
- Short 0.5 meter cable and 0.8 meter extension cable included for portable devices

- Aluminiumgehäuse
- Kurzes 0,5-Meter-Kabel und 0,8-Meter-Verlängerungskabel für tragbare Geräte im Lieferumfang enthalten

- Embouts aluminium
- Un câble court de 0,5m et un câble de rallonge de 0,8 fournis pour les appareils portables

AH-C452 Black White Silver

In-Ear Headphones

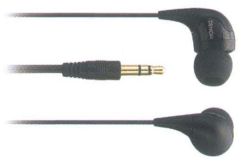

- Ergonomic desing for a comfortble fit in the ear
- 0.7m High quality OFC cabling

- Ergonomisches Design für bequemen Sitz im Ohr
- 0,7m Signalkabel aus sauerstofffreiem Kupfer (OFC)

- Un concept ergonomique qui s'fadapte parfaitement à toute morphologie d'foreille
- Câblé OFC de haute qualité (0.7m)

AH-C351 Black White

In-Ear Headphones

- Gold plated connector
- 0.5m High quality OFC cabling

- Vergold Klinken-Stecker
- 0,5m Signalkabel aus sauerstofffreiem Kupfer (OFC)

- Connecteur plaqué or
- Câblé OFC de haute qualité (0.5m)

AH-C252 Black White

In-Ear Headphones

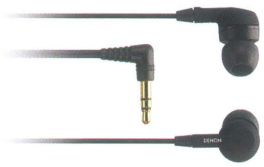

- Rubber-coated housing prevents slipping and provides a supple texture
- 1.3m High quality OFC cabling

- Die gummierte Oberfläche verhindert ein Verrutschen und bietet eine geschmeidige Struktur
- 1.3m Signalkabel aus sauerstofffreiem Kupfer (OFC)

- Le revêtement en caoutchouc évite les glissements et offre une grande souplesse
- Câblé OFC de haute qualité (1.3m)

ASD-11R Black White

Control Dock for iPod

- Enjoy photos and videos from your iPod
- Enjoy music from your iPod with high quality sound

- Erleben Sie Fotos und Videos von Ihrem iPod
- Hören Sie Musik mit Ihrem iPod in bester Klangqualität

- Savourez aussi les photos et les vidéos
- Lecture avec commande et contrôle de votre iPod

http://www.denon.com/asd-11r/

Made for iPod

ASD-3W Black White

ASD-3N Black White

Control Dock for iPod

- Plays Music File from PC wirelessly (WMA, AAC non DRM, MP3, WAVE, FLAC) *1)
- Plays Internet Radio wirelessly (MP3, WMA) *1)

*1) Wireless function is ASD-3W only

- Wiedergabe von Musik vom PC *1)
- Internet-Radio mit Unterstützung für MP3- und WMA-Radiostationen *1)

*1) Erfordert Netzwerk mit Internet-Zugang, W-LAN-Funktion nur bei der ASD-3W

- Accède et lit les fichiers musicaux d'un Pc en Wifi *1) (Accède aux radios internet en Wifi *1)
- Interface utilisateur Graphique (Jacquette d'album, Multi langue pour les Meta data et l'interface graphique)

*1) Fonction Wifi disponible seulement sur l'ASD-3W

http://blog.denon.com/asd-3/

Made for iPod

*Design and specifications are subject to change without notice.
*iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

DENON SERVICE NETWORK / 服務網絡

- **Please consult the outlet where the equipment was purchased.**
- **Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben.**
- **SVP veuillez consulter votre revendeur.**
- **Neemt u alstublieft contact op met het verkooppuntwaar u de apparatuur heeft gekocht.**
- **Por favor consulte en el establecimiento donde compró el equipo.**
- **Vänligen ta kontakt med butiken där du köpt utrustningen.**
- **Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.**
- **Contacte a loja onde comprou o equipamento.**
- **請向你購入本機的商號查詢。**
- **请向你所购买本机的商行查询 。**

Australia	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
Austria	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
Belgium	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
Canada	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
China	电音数码音响贸易(上海)有限公司 上海市淮海中路887号永新大厦6010室 电话:(021)64372299 传真:(021)64339973 邮编：200020 天龙客户服务热线：021-62949285
Czech republic	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635,148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
Denmark	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
Finland	Soundata Oy Hameentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
France	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel:+33(0)1-41-383230 Fax: +33(0)1-41-380110
Germany	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-15
Greece	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
Hong Kong	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940 香港九龍尖沙咀廣東道5號海港城海洋中心5樓501室 電話：852-2516-5864 傳真：852-2516-5940
Hungary	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
Iceland	Einar Farestveit & co hf., Borgartun 28, P.Box 5440, 125 Reykjavík. Tel: +354 5207900 Fax: +354 5207910
India	PROFX SERVICE CENTRE Advanced Audio Solutions (Bangalore)Pvt. Ltd. No 53, K.H.Road, Opp .Big Bazaar, Bangalore - 560 027, India Tel: 080 3297 0853 Fax: 080 2211 2043
Indonesia	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
Israel	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
Italy	Audiodelta S.r.l.19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
Korea	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
Malaysia	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
Mexico	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
Netherlands	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
New Zealand	Avalon-Pacific Marketing Limited. 15C Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
Norway	Hi-Fi Klubben Marcus Thranes gate 4-6, 0473 Oslo, Norway Tel: +47 22 80 63 10 Fax: +47 22 80 63 29
Philippines	Lotteworld Audio Video Systems Incorporated CET Building Mezzannine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
Poland	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
Portugal	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
Singapore	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
Slovakia	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel:045-5400 703 Fax:045-5400 704
South Africa	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, P.O.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
Spain	Gaplasa S.A.AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
Sweden	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel:031 33 51010 Fax:031 33 51019
Switzerland	DKB household AG, Abteilung Elektronik. Eggbühlstrasse 28, CH-8052 Zürich, Switzerland Tel: 01-306-1626 Fax: 01-306-1690
Taiwan R.O.C.	D&M Sales and Marketing Taiwan Ltd. 6F-2 NO148, Songjiang Rd., Taipei City 10458, Taiwan R.O.C. Tel: 02-2522-1308 Fax: 02-2100-1175
Thailand	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
Turkey	Ertekin electronik tic. ve san. a.s. Galipdede Caddesi No.: 113 Kuledibi-Karaköy / Istanbul, Turkey Tel: +90(212)293-9515 Fax: +90(212)249-3512
U.A.E.	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
Ukraine	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
United Kingdom & Eire	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
U.S.A.	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
Vietnam	Anh Duy Manufacturing – Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Blinh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

* If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.
* Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte miteinem der hier aufgelisteten Adressen in Verbindung.
* Si il n'y a pas destation technique proche de chez vous, veuillez contacter nos l' un de noscentres techniques, listés ci dessous, pour toutes demandes techniques.
* Als er geen servicecenter bij uin de buurt is, neem dan contact op een een van onze bovengenoemdeservicecenters voor ondersteuning.
* Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.
* Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).
* Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.
* Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados
* 如若當地並無服務中心，請據上表所列本公司海外服務中心查詢售後服務事宜。
* 若当地无服务中心，请联系上述所列我们的海外服务中心，以便跟踪服务咨询 。

DENON SERVICE NETWORK / 服務網絡

- **Please consult the outlet where the equipment was purchased.**
- **Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben.**
- **SVP veuillez consulter votre revendeur.**
- **Neemt u alstublieft contact op met het verkooppuntwaar u de apparatuur heeft gekocht.**
- **Por favor consulte en el establecimiento donde compró el equipo.**
- **Vänligen ta kontakt med butiken där du köpt utrustningen.**
- **Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.**
- **Contacte a loja onde comprou o equipamento.**
- **請向你購入本機的商號查詢。**
- **请向你所购买本机的商行查询。**

Australia	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
Austria	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
Belarus	Neotechnostyle MOSKOVSKAJA STR.20, ROOM 1, 220007 Minsk Tel: +375 17 228 69 86
Belgium	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
Bosnia Herzegowina	Audiolab centar d.o.o. Mlinska 5, 10143 Strmec Samoborski Tel: +385 91 33 0 958 Fax: +385 91 33 0 990
Bulgaria	Sofia Audio Centre 8 Angel Kanchev St., 1000 Sofia Tel: +359 2 9806213 Fax: +359 2 9806212
Canada	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
China	电音数码音响贸易（上海）有限公司 上海市淮海中路887号永新大厦6010室 电话：（021）64372299 传真：（021）64339973 邮编：200020 天龙客户服务热线：021-62949285
Croatia	Audiolab centar d.o.o. Mlinska 5, 10143 Strmec Samoborski Tel: +385 91 33 0 958 Fax: +385 91 33 0 990
CYPRUS	MODESTOU SOUND&VISION PLC LTD 2, Salaminos Avenue, 1045 Nicosia Tel: +357 996 23 014
Czech republic	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635,148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
Denmark	AUDIONORD DISTRIBUTION DALI ALLE 1, 9610 NOERAGER Tel: +45 8743 2157 Fax: +45 8743 2140
Estonia	Sperco Impex Ltd. Ehitajate tee 122, 13517 Tallinn Tel: +372 6509810 Fax: +372 6509811
Finland	Soundata Oy Hameentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
France	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel:+33(0)1-41-383230 Fax: +33(0)1-41-380110
Germany	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-15
Greece	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
Hong Kong	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940 香港九龍尖沙咀廣東道5號海港城海洋中心5樓501室 電話：852-2516-5864 傳真：852-2516-5940
Hungary	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
Iceland	Einar Farestveit & co hf., Borgartun 28, P.Box 5440, 125 Reykjavík. Tel: +354 5207900 Fax: +354 5207910
India	PROFX SERVICE CENTRE Advanced Audio Solutions (Bangalore)Pvt. Ltd. No 53, K.H.Road, Opp .Big Bazaar, Bangalore - 560 027, India Tel: 080 3297 0853 Fax: 080 2211 2043
Indonesia	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
Israel	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
Italy	Audiodelta S.r.l. 19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
Kazachstan	Samat Electronics Ltd 88, Karasai Batyr St, 050012 Almaty Tel: +7 3272 718304 Fax: +7 3272 581945718438
Korea	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
Latvia	Sperco Impex Ltd. Ehitajate tee 122, 13517 Tallinn Tel: +372 6509810 Fax: +372 6509811
LITHUANIA	OGMIOS ASTRA PREKYBA UAB Graiciuno street 1, VILNIUS LT-02241 Tel: +370-5 - 2649260 Fax: +370-5 - 2649261
Macedonia	D.T. KODI ul. Cedomir Kantargiev 21a, 1000 Skopje Tel: + 389 2 3133 104
Malaysia	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
Malta	General Technologies Ltd. 174 Mdina Road, 9018 Qormi Tel: +356 2747 2747
Mexico	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
Moldova	Mandolina SRL Techomarket Bul. Mircea cel Batrin 6, 2022 Chisinau Tel: +373 22 241033 Fax: +373 22 226009
Montenegro	Audiolab centar d.o.o. Mlinska 5, 10143 Strmec Samoborski Tel: +385 91 33 0 958 Fax: +385 91 33 0 990
Morocco	Ines Marokko KM 11,5 BD Chefchaouni, 20250 Casablanca Tel: +212 22 66 6768 Fax: +212 22 35 42 77
Netherlands	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
New Zealand	Avalon-Pacific Marketing Limited. 15C Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
Norway	AUDIONORD DISTRIBUTION DALI ALLE 1, 9610 NOERAGER Tel: +47 815 000 90 Fax: +47 228 063 05
Philippines	Lotteworld Audio Video Systems Incorporated CET Building Mezzannine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
Poland	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
Portugal	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
Romania	LOTUS TELECOM SRL 39 Mehadia St., 6, 060541 Bucharest Tel: +40-21-2202440 Fax: +40-744-501516
Russia	BMF Limited Novoalekseevskaya Street 19 Building 2 Office 55, 129626 Moscow Tel: +7 495 647-0275 Fax: +81 33 6632567
Serbia	Audiolab centar d.o.o. Mlinska 5, 10143 Strmec Samoborski Tel: +385 91 33 0 958 Fax: +385 91 33 0 990
Singapore	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
Slovakia	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel: 045-5400 703 Fax: 045-5400 704
Slovenia	Digital-Professional Audio Seeböckgasse 59, 1160 Wien Tel: +43 1 480 10 06 Fax: +43 1 485 76 79
South Africa	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, P.O.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
Spain	Gaplasa S.A.AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
Sweden	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel: 031 33 51010 Fax: 031 33 51019
Switzerland	DKB Household Switzerland AG Eggbühlstrasse 28, 8052 Zürich Tel: +41 1 3061615 Fax: +41-044-3061690
Taiwan R.O.C.	D&M Sales and Marketing Taiwan Ltd. 6F-2 NO148, Songjiang Rd., Taipei City 10458, Taiwan R.O.C. Tel: 02-2522-1308 Fax: 02-2100-1175
Thailand	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
Turkey	Ertekin Elektronik Tic. ve San. A.Ş Galipdede Cd. No.: 83 Kuledibi - Karaköy, İstanbul, Turkey Tel: +90 212 293 95 15 Fax: +90 212 249 35 12
U.A.E.	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
Ukraine	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
United Kingdom & Eire	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
U.S.A.	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
Vietnam	Anh Duy Manufacturing – Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Blinh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

* If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.
* Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte miteinem der hier aufgelisteten Adressen in Verbindung.
* Si il n'y a pas destation technique proche de chez vous, veuillez contacter nos l' un de noscentres techniques, listés ci dessous, pour toutes demandes techniques.
* Als er geen servicecenter bij uin de buurt is, neem dan contact op een een van onze bovengenoemdeservicecenters voor ondersteuning.
* Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.
* Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).
* Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.
* Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados.
* 如若當地並無服務中心，請據上表所列本公司海外服務中心查詢售後服務事宜。
* 若当地无服务中心，请联系上述所列我们的海外服务中心，以便跟踪服务咨询。

DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.
5431 10032 005D
CQE1A226S

DENON®

LIMITED WARRANTY

(USA / CANADA)

	PAGE
USA (ENGLISH)	2
CANADA (ENGLISH)	3
CANADA (FRENCH)	4

USA

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
(888) 544-8434 Fax

DENON REGIONAL SUPER SERVICE CENTERS (Repair only-No parts orders please)

PYRAMID AUDIO
305 E. Braker Lane
Austin, TX 78753-2746
(512) 458-8292
(512) 453-4542 Fax

UNITED RADIO SERVICE
5717 Enterprise Parkway
E. Syracuse, NY 13057-2905
(800) 634-8606
(315) 446-8505 Fax

AUDIO SERVICES
544 Central Dr., Suite 101
Virginia Beach, VA 23454-5245
(757) 498-8277
(757) 498-9554 Fax

INNER SOUND
1416 S.E. Morrison Street
Portland, OR 97214-2646
(503) 238-1955
(503) 238-1787 Fax

NORMAN'S ELECTRONICS
3653 Clairmont Road
Atlanta, GA 30341-4907
(770) 451-5057
(770) 455-8337 Fax

GOLD CROWN ELECTRONICS
Victoria Business Park
129 E. Savarona Way
Carson, CA 90746-1406
(310) 538-8282
(310) 538-8281 Fax

SERVICE WIDE TECHNOLOGIES
2239 Curtiss Street
Downers Grove, IL 60515-4010
(630) 969-7333
(630) 969-7330 Fax

ELECTRONICE EXPRESS
1809 E. Fabyan Parkway
West Chicago, IL 60185
(630) 208-4600
(630) 208-4601 Fax

CANADA

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham Ontario, L3R 5B1
(905) 475-4085
(905) 475-4159 Fax

WARRANTY (HOME)
00D 515 0944 804
CQE1A224U

This warranty will be honored only in the **U.S.A**

DENON®

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA), LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
Option Board			ACD	3	
CD Player, DVD Player			DCD, DCM, DP, DVD, DVM	1	
CD Recorder			CDRW	1	
System Audio			D-F, D-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	5	
Sub-woofer			DSW	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH	1	
Front Surround Home Theater System			DHT-FS	1	
Video Processor			DVP	3	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA), LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges, Accessories and Remote Controller which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

a. You are responsible for transporting your unit or arranging for its transportation.
b. If shipment of your unit is required;
   You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem.
   In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
www.usa.denon.com

This warranty will be honored only in **Canada.**

DENON®

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Pre-Amplifier, Digital Pre-Amplifier Powe Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
Option Board			ACD	3	
CD Player, DVD Player			DCD, DCM, DP, DVD, DVM	1	
CD Recorder			CDRW	1	
System Audio			D-F, D-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	5	
Sub-woofer			DSW	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH	1	
Front Surround Home Theater System			DHT-FS	1	
Video Processor			DVP	3	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (if you are uncertain as to whether a service station is DENON authorized, please contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

a. You are responsible for transporting your unit or arranging for its transportation.
b. If shipment of your unit is required;
   You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem.
   In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca

Cette garantie ne sera honorée qu'au **Canada.**

DENON®

GARANTIE LIMITÉE

Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d'achat du consommateur original auprès d'un revendeur official D&M CANADA INC. pendant les périodes suivantes.

Catégorie de produit

Contrôleur A / V, Récepteu A / V, Récepteur AM / FM			AVC, AVR, DRA	2	ANNÉES
Récepteur DVD, Système DVD Home Theater			ADV, S	1	
Préamplificateur, préamplificateur numérique Amplificateur de puissance, Préamplificateur phono			PRA, AVP, DAP, POA, HA	3	
Syntoniseur, amplificateur intégré			TU, PMA	3	
Carte optionnelle			ACD	3	
Lecteur CD, Lecteur DVD			DCD, DCM, DP, DVD, DVM	1	
Enregistreur CD			CDRW	1	
Système Audio			D-F, D-M, S	1	
Table tournante	1	Levée auto	DP-L, DP-M	4	
	2	Auto complet	DP-F	2	
Haut-parleurs			SC	5	
Sub-woofer			DSW	1	
Micro			DM-S	2	
Dock de contrôle pour iPod®			ASD	1	
Casque d'écoute			AH	1	
Avant Surround Système Home Theater			DHT-FS	1	
Processeur vidéo			DVP	3	
Cellule phonolectrice			DL	90	JOURS
Télécommande			RC	90	

Apple et iPod sont des marques commerciales d'Apple Inc., déposées aux Etats-Unis et dans d'autres pays.

Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l'exception de ceux indiqués ci-après qui conforrment selon les termes durant la periode de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n'est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n'a pas été acheté au Canada auprès d'un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant "REVENDEUR OFFICIEL DENON" affiché dans leur magasin. Si vous doutez qu'un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d'un produit non autorisé, debalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu'un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur), (5) Articles sujets à détérioration par l'usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD ou DVD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d'installation ou de déplacement résultant d'un défaut du produit.

Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d'application de la garantie après la date d'achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d'œuvre.

Exécution de la garantie

Si votre produit nécessite service, il peut être envoyé à tout atelier de service officiel DENON ou chez D&M CANADA INC. (Si vous doutez que l'atelier de service soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous). Dans tous les autres cas, les procédures suivantes s'appliquent si votre article doit être transporté pour un service sous garantie.

a. Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
b. Si votre article doit être envoyé, vous devez payer les frais d'envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
c. LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D' ACHAT D'ORIGINE.
d. Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème. Dans le cas d'un lecteur CD ou DVD, joindre un disque que l'appareil n'a pu lire pour test. Il vous sera retourné avec l'article.

CETTE GARANTIE EST VALABLE SEULMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département technique dont l'adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES' Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N' INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D'AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGEES PENDANT LE TRNASPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D'UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L'EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S'APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d'autres droits qui varient d'une province à l'autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca